



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Barksdale

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">p/n: 0111-507; Type: UNS-PA16-PA18-G3/4</a>	
<a href="#">0113-182 / UNS2000</a>	COMPLETE SENSORS WITH electrical boxes.
<a href="#">0303-029</a>	Limit Switch GK03 incl. 3 m Silicon cable
<a href="#">0402-056 D2T-M150SS</a>	PRESSURE OR VACUUM ACTUATED SWITCH
<a href="#">P/N: 0401-432 Type: D2T-M80SS-ST3</a>	Pressure switch
<a href="#">0403-076 / E1H-H15-P7</a>	pressure switch
<a href="#">0417-015 / 8151-PL1-B</a>	Pressure switch
<a href="#">0419-002 / 9221-PL1-V</a>	pressure switch
<a href="#">0419-020</a>	Special pressure switch
<a href="#">205R6WC3</a>	Valve
<a href="#">316030</a>	Trockenschutzschalter
<a href="#">96101-BB1</a>	Pressure Switch
<a href="#">0405-280 / B2T-H32SS</a>	Pressure switch
<a href="#">BFS-10-N-G1/4-MS-NO-ST 0,4 - 2 l (0711-256.5)</a>	
<a href="#">BFS-10-N-G1/2-SS-WE-ST</a>	Flow rate: 2-7 ml / min350 bar1 ~ 230 V - 1.5 A - 50 VA
<a href="#">BNA-S22-3/4"150-RF VA30/02-MA-LM 1.0-1.50m (0332=1037)</a>	
<a href="#">0401-136 / D1T-H18SS</a>	pressure switch
<a href="#">0401-215</a>	pressure switch
<a href="#">0401-224 / D1T-M80SS</a>	pressure switch
<a href="#">DPD1T-M150SS (p/n 0402-056)</a>	Diaphragm Differential Switch
<a href="#">E1H-H250-P7</a>	pressure switch
<a href="#">E1H-H500</a>	
<a href="#">E1H-H90-P4 (0403-126)</a>	Druckschalter
<a href="#">KLM-025-M4-ST0-1</a>	Pressure switch
<a href="#">p/n: 0601-048; Type: ML1H-H202S</a>	Temperature switch
<a href="#">0402-082, DPD2T-GH18SS-EXI</a>	
<a href="#">0602-061 / L2H-H354S</a>	temperature switch
<a href="#">P/N: 0711-259.5, Type: BFS-10-N-G1/4-SS-NO-ST</a>	Optical flow controller
<a href="#">0402U101 / CD2H-M150SS</a>	pressure switch
<a href="#">0711-347.4</a>	Strömungswächter
<a href="#">D2X-H18SS-UL-S0084</a>	Explosion Proof Diaphragm Pressure Switches
<a href="#">0401-432</a>	PRESSURE SWITCH
<a href="#">B1T-H12SS</a>	Druckschalter
<a href="#">UPA2/11bA/420/G1/4E/M12/ F (0431-409)</a>	Electronic Pressure Transducer UPA2

Product	Description
<a href="#">0406-021 / C9622-2</a>	Pressure switch
<a href="#">96211-BB4-T2 (0406U081)</a>	
<a href="#">ML1H-H354-WS (0601-096)</a>	Temperaturschalter
<a href="#">D2T-M80SS (0401-416)</a>	pressure switch
<a href="#">0405-318 / B2T-M48SS</a>	pressure switch
<a href="#">DPD1T-M3SS</a>	pressure switch
<a href="#">HDIXHH80SSUL</a>	Druckschalter
<a href="#">0801-142</a>	Valve
<a href="#">9045ROAC3</a>	Ventil
<a href="#">96101-BB2</a>	Sealed Piston Pressure Switch
<a href="#">9653-2-WA</a>	Pressure Switch
<a href="#">0423-125 / UDS3V3/400bar/4-20 mA</a>	Electric pressure switch
<a href="#">E1H-H15-P7-GL</a>	Membran-Kolben-Druckschalter
<a href="#">0221-357</a>	
<a href="#">pn 0113-776 / UNS2000-ABS/VA/FLS-PG-PE33-L2/3.3-Dual Lo268</a>	
<a href="#">BPS312VM0050BP</a>	pressure switch
<a href="#">0112-729</a>	float switch
<a href="#">PN: 0711-260.7, Type: BFS-10-N-G1/2-SS-NO-ST</a>	
<a href="#">905-0211</a>	
<a href="#">P1H-M340</a>	Druckschalter
<a href="#">DPD2T-M80SS-EXI</a>	Druckschalter
<a href="#">BFS-10-N-G1/2-MS-NO-M12 2.0 ... 7.0 l/min/Sonder</a>	
<a href="#">D2T-GH18SS-P2-Exi</a>	
<a href="#">0401-216</a>	Druckschalter
<a href="#">D1T-H2SS-EXI</a>	Druckschalter
<a href="#">D1T-H3SS-Exia</a>	Pressure switch
<a href="#">0401-168 D1T-H3SS-EXI</a>	Pressure Switch / Druckschalter
<a href="#">D1T-H2SS-EX1 (0401-155)</a>	Pressure Switch / Druckschalter
<a href="#">0405U001</a>	
<a href="#">KLM-025-M4-ST0-1 - OEM</a>	pressure switch
<a href="#">0407U036 / 9048-4</a>	pressure switch
<a href="#">96201-BB4-T2</a>	compact pressure switch
<a href="#">96211-BB6-T2</a>	pressure switch
<a href="#">96211-BB1-T2-Z17</a>	Compact Pressure Switch
<a href="#">96221-BB1</a>	Compact Pressure Switch
<a href="#">0406-050 / 9675-4</a>	pressure switch
<a href="#">0406U096 / A9675-4-AA</a>	Pressure switch
<a href="#">0406U006</a>	Sealed Piston Pressure Switch
<a href="#">0406-010 / C9612-3</a>	Pressure switch special
<a href="#">0401-331 / D2T-A80SS</a>	diaphragm pressure switch
<a href="#">E1H-H15-P6-PLS</a>	
<a href="#">0403U082</a>	Pressure switch UL + CSA
<a href="#">E1H-H90-BR</a>	pressure switch

Product	Description
<a href="#">0412-018 / MSPS-JJ100SS</a>	Industrial Pressure Switch
<a href="#">CSK12-11-41B</a>	Mechanical Pressure Switch
<a href="#">CSK16-12-33B</a>	Compact Pressure Switch
<a href="#">0404-128 / P1H-K85</a>	pressure switch
<a href="#">P1H-B340SS</a>	Dia-Seal Pistons
<a href="#">0404-110 / P1H-K30SS-T</a>	pressure switch
<a href="#">(0412-019) MSPS-JJ15SS</a>	pressure switch
<a href="#">MSPS-FF100SS</a>	Industrial Pressure Switch
<a href="#">MSPS-FF15SS-E</a>	pressure switch
<a href="#">CSP13-31-12B</a>	
<a href="#">0406U085 / 96201-BB3</a>	Pressure Switch
<a href="#">0406-038 / 96201-BB3-T2</a>	Compact Switch
<a href="#">96201-BB3-T4</a>	Pressure switch
<a href="#">96211-BB1-T2</a>	Mechanical Pressure Switches
<a href="#">96211-BB3-T1</a>	Mechanical Pressure Switch
<a href="#">96211-BB3-T2</a>	pressure switch
<a href="#">96211-BB4-T2</a>	compact pressure switch
<a href="#">96221-BB1-T4</a>	
<a href="#">0403-028 / E1H-GH250-P4</a>	Econ-O-Trol Switch
<a href="#">0403-035 / E1H-GH90-P4</a>	pressure switch
<a href="#">0403-059 / E1H-H15-P4</a>	Econ-O-Trol Pressure Switch
<a href="#">E1H-H15-F2</a>	Pressure Switch
<a href="#">E1H-H15-P4-V</a>	pressure switch
<a href="#">0403-069 / E1H-H15-P6</a>	pressure switch
<a href="#">0403-075 / E1H-H15-P6-V</a>	pressure switch
<a href="#">0403-520 / E1H-H250-F2</a>	Econ-O-Trol Switch
<a href="#">0403-080 / E1H-H250-P4</a>	pressure switch
<a href="#">E1H-H250-P6</a>	pressure switch
<a href="#">0403U084 / E1H-H500-F2</a>	UL listed Pressure switch
<a href="#">P/N: 0403-105, Type: E1H-H500-P4</a>	pressure switch
<a href="#">0403-138 / E1H-H90-P6</a>	pressure switch
<a href="#">E1H-M15-P4-V</a>	Prerssure switch
<a href="#">E1H-M90-V</a>	Econ-O-Trol Switch
<a href="#">0403-184 / E1H-R250-P4</a>	Econ-O-Trol Switch
<a href="#">E1S-H15-P4 (p/n 0403-216)</a>	Pressure Switches
<a href="#">0403U393 / E1S-H90</a>	pressure switch
<a href="#">E1S-H90-P4</a>	pressure switch
<a href="#">E1S-M250-V</a>	pressure switch
<a href="#">E1S-M90-V</a>	pressure switch
<a href="#">EPD1H-BB40</a>	Differential Pressure Switch
<a href="#">724S-43-2B</a>	
<a href="#">VCD1H-A18SS</a>	
<a href="#">0402U192 / CD2H-M80SS</a>	Pressure Switch

Product	Description
<a href="#">D2T-H2SS</a>	Druckschalter
<a href="#">D2T-M2SS</a>	pressure switch
<a href="#">0401U697 / D1T-A3SS</a>	Pressure Switch
<a href="#">0401-870 / D2T-A3SS</a>	pressure switch
<a href="#">D2T-H18SS (0401-373)</a>	pressure switch
<a href="#">0401-209 / D1T-M18SS</a>	pressure switch
<a href="#">D2T-M18SS</a>	pressure switch
<a href="#">P/N: 0401-224, Type: D1T-M80SS</a>	Terminal Block Diaphragm Switch
<a href="#">0401-416 / D2T-M80SS</a>	diaphragm pressure switch
<a href="#">D2T-A150SS</a>	Pressure Switch
<a href="#">0401-074 / D1T-GH150SS</a>	pressure switch
<a href="#">D2T-M2SS-P2</a>	Terminal Block Diaphragm Switch
<a href="#">D2H-H18SS</a>	diaphragm pressure switch
<a href="#">D2S-H18SS</a>	diaphragm pressure switch
<a href="#">D1H-A80SS</a>	Diaphragm Switch
<a href="#">D2H-M80SS</a>	Mechanical Pressure Switch
<a href="#">D2H-GH80SS</a>	Diaphragm Switch
<a href="#">0401U680 / D1H-A150SS</a>	Pressure Switch
<a href="#">0401U718 / D2H-A150SS</a>	Diaphragm Switch
<a href="#">D2H-M150SS</a>	Diaphragm Switch
<a href="#">D1H-H3SS-P2</a>	
<a href="#">0406U111 / 9681X-2CC-2</a>	Explosion Proof Compact Switch
<a href="#">P/N: 0406u102, Type: 9692X-1CC-3</a>	Ex-proof pressure switch
<a href="#">9AC1TB</a>	Compact Pressure Switch
<a href="#">9EB1TV</a>	pressure switch
<a href="#">96211-BB5-T2-P1</a>	Compact Switch
<a href="#">0406U190 / 96201-BB1-T2-P1</a>	pressure switch
<a href="#">P/N: 0431-341 Type: UPA2-LMP307</a>	Probe
<a href="#">P/N: 0111-203 Type: UNS-PA1/2 NPT-PA18</a>	PVC cable on the side
<a href="#">0499-025</a>	PVC cable with built-in. air hose
<a href="#">P/N: 0405-215, Type: B2S-H48SS</a>	pressure switch
<a href="#">0406U097 / 9675-2</a>	pressure switch
<a href="#">0404-114 / P1H-K340</a>	Pressure switch
<a href="#">(316030) OEM</a>	Dry circuit breakers
<a href="#">X1T-4100-40-GE140/166</a>	Pressure switch
<a href="#">D1T-GM 3SS</a>	Druckschalter
<a href="#">96201-BB2-T2</a>	Pressure switch
<a href="#">8131-PL1-B</a>	Druckschalter
<a href="#">D1X-GM150SS-EX</a>	Druckschalter
<a href="#">UAS3/420/NA</a>	El. Anzeigegerät
<a href="#">BPS32GVM0400B</a>	pressure switch
<a href="#">0601-218 / ML1H-H351</a>	temperature switch
<a href="#">0417-283 / 8001-PL1-B-EA1-GE261</a>	Pressure switch

Product	Description
<a href="#">0111-201</a>	Float switch
<a href="#">0111-203</a>	
<a href="#">BPS342EM0400BP</a>	
<a href="#">MSPS-XX100-Q96 / 0412U008</a>	pressure switch
<a href="#">UNS2000-VA/T2NPT-KLS BN30-L1/3-VV Lo300 - OEM product</a>	LEVEL TRANSMITTER
<a href="#">0113-182 (OEM)</a>	Level Switch
<a href="#">0414-081</a>	
<a href="#">0113-152</a>	ONLY Mechanical Sensor
<a href="#">0431-093</a>	
<a href="#">BPS32GVM0010B</a>	
<a href="#">T2H-M154S-A</a>	
<a href="#">50-ML1H-SB1</a>	Temp switch
<a href="#">0111-396</a>	Liquid Level Sensor
<a href="#">0402-056</a>	
<a href="#">0401-388 / D2T-M150SS</a>	pressure switch
<a href="#">0111-542, Type: UNS-VA1/8-K2/2-PP19/2(1) -Exi</a>	
<a href="#">BPS31GVM0100B</a>	El. pressure switch
<a href="#">BPS32NVM6000PP</a>	
<a href="#">BPS32GVM0200B</a>	pressure switch
<a href="#">E1H-M250-P6-PLS</a>	Pressure Switch UL
<a href="#">0405-109</a>	Pressure switch
<a href="#">0401U882 / D1X-J80SS-P2-UL</a>	Pressure Switch
<a href="#">0111-751</a>	Switch
<a href="#">0423-119 UDS3V3/50bar/4-20mA El.</a>	
<a href="#">BPS342EM0010BP</a>	
<a href="#">0401-154</a>	Pressure switch TYPE D1T-H2SS
<a href="#">9692X-1CC-2</a>	PRESSURE SWITCH
<a href="#">KLM-025-M4-ST0-1-V/ 0416-144</a>	PRESSURE SWITCH
<a href="#">0401-853 D2T-A150SS</a>	
<a href="#">0402U103</a>	Druckschalter
<a href="#">Nr.: 0403-126, Type: E1H-H90-P4</a>	pressure switch
<a href="#">0401-215 / D1T-M3SS</a>	pressure switch
<a href="#">UPA1-040-Z21 (0437-036)</a>	
<a href="#">E1H-H250-P7-Exi</a>	pressure switch
<a href="#">0409-123 / X1T-4000-25-GE262</a>	pressure switch
<a href="#">0407U007 / 9048-2-Z11</a>	pressure switch
<a href="#">D1X-J150SS-UL</a>	pressure switch
<a href="#">UNS-VA1/8-K3-VA27/1(2) 3m PVC-K. 105°C NO/NC</a>	probe
<a href="#">UNS-VA1/8-K3-VA27/1(2)HT 3m Silikonk. 150°C NO/NC</a>	
<a href="#">BFS-10-N-G1/4-MS-NO-ST (0711-256.1)</a>	Switch
<a href="#">071-348.5</a>	
<a href="#">E1H-H90-P7-ST1</a>	relay
<a href="#">0303-033 / GK03</a>	GK03 5m PVC cable/cable limit switch

Product	Description
<a href="#">P/N: 0416-035, Type: KLM-025-M1-K4-2</a>	pressure switch
<a href="#">P/N: 0401-189, Type: D1T-M150SS</a>	pressure switch
<a href="#">p/n: 0401-216; Type: D1T-M3SS-EXI</a>	Microswitch
<a href="#">0431-844</a>	Pressure transducer
<a href="#">0602-130, T2H-H251S-25-A</a>	temperature transmitter
<a href="#">0112-824</a>	
<a href="#">0112-764</a>	
<a href="#">0221-361</a>	
<a href="#">0221-358</a>	
<a href="#">0221-359</a>	
<a href="#">P/N: 0416-157, Type: KLM-025-M4-ST0-1</a>	pressure switch
<a href="#">9211-PL1-V (0419-001)</a>	pressure switch
<a href="#">9231-PL1-V (0419-003)</a>	pressure switch
<a href="#">BPS34GVM0200B</a>	pressure switch
<a href="#">907-0344</a>	
<a href="#">0403-115 / E1H-H500-P7</a>	Pressure Switch
<a href="#">E1H-H500-P4 0403-105</a>	pressure switch
<a href="#">0501.328.133</a>	pressure switch
<a href="#">E1H-H15-P7</a>	Pressure switch
<a href="#">Part No. 0713-349.10</a>	
<a href="#">0801-503</a>	valve
<a href="#">921R3WQ3-Q2</a>	DIVERTER VALVE
<a href="#">Part No. 0113-882</a>	
<a href="#">UDS3V3/50bar/0-10V</a>	Pressure switch
<a href="#">0402-097 / DPD2T-M150SS</a>	Pressure switch
<a href="#">BPS34GVM0100B</a>	100b/420-2/G1/4E/F El. Druckschalter
<a href="#">998-2999</a>	Preset pressure preset pressure
<a href="#">0402-066</a>	Pressure switch
<a href="#">0111-210</a>	Level switch
<a href="#">P1H-K30SS-T-GE148</a>	PRESSURE SWITCH
<a href="#">0713-354.4</a>	
<a href="#">D1H -AB0SS 50-80 PSI</a>	
<a href="#">P/N: 0401-274, Type: D1X-H18SS-EX</a>	pressure switch
<a href="#">BPS32GVM0600BP</a>	El. pressure switch
<a href="#">BPS32GVM9000PP</a>	
<a href="#">96100-BB2</a>	
<a href="#">316030 (Trockenschutzschalter)</a>	Dryer circuit breaker
<a href="#">T1X-H601S-A-EX</a>	Temperature switch
<a href="#">0405-111</a>	pressure contact
<a href="#">0423-127</a>	Pressure switch
<a href="#">PN: 0404-291 Type: P1H-M340SS-GE6/86</a>	Pressure switch
<a href="#">190060</a>	
<a href="#">0416-160 / KLM-025-M4-ST0-1-V 13 bar increasing (s)</a>	

Product	Description
<a href="#">PN:0601-328 Type: MT1H-M251S-A</a>	Temperature switch
<a href="#">PN:0423-127 Type:UDS3</a>	4-way pressure switch
<a href="#">9048-2</a>	SEALED PISTON PRESSURE SWITCH
<a href="#">82C1TB</a>	Compact Pressure Switch
<a href="#">0417-013 8131-PL1-B</a>	Pressure switch
<a href="#">906-0954</a>	Port adaptor
<a href="#">625H4-13</a>	PRESSURE TRANSDUCER
<a href="#">013-182</a>	Complete sensor
<a href="#">0407U049 / 9048-5</a>	Pressure Switch
<a href="#">BPS34EVM3000P</a>	
<a href="#">9022-M-B-CD</a>	Control Products Valve
<a href="#">0409-041 Typ X1T-4100-40</a>	Pressure Switches
<a href="#">D1T-GH80SS</a>	Terminal Block Diaphragm Switch
<a href="#">625H3-16</a>	PRESSURE TRANSDUCER
<a href="#">0428-115</a>	electr. Pressure switch
<a href="#">6141R3HC3-MC (Valve)</a>	Valve
<a href="#">BPS34GEM0010BRPQ1 (0427-180)</a>	
<a href="#">0499-002</a>	
<a href="#">907-0185</a>	
<a href="#">T2H-H251</a>	REMOTE MOUNT TEMPERATURE SWITCH
<a href="#">425H3-06</a>	Pressure Transducer
<a href="#">MT1H-H351S-A-EXI</a>	Temperature switch
<a href="#">9617-4</a>	Mechanical Pressure Switch
<a href="#">T8014-2-12</a>	
<a href="#">0417-014 / 8141-PL1-B</a>	pressure switch
<a href="#">BPS34NVM6000PP</a>	
<a href="#">0221-356</a>	
<a href="#">0405-132</a>	Pressure contact
<a href="#">p/n: 0221-473; Type: USE3000-VA/T2-KLS-VA44 R12-350-MU3L Lo442</a>	
<a href="#">E1H-H-VAC-P4 (0403-052)</a>	pressure switch
<a href="#">D1T-M150SS-EXI</a>	pressure switch
<a href="#">D1T-M3SS</a>	Pressure Switch
<a href="#">0631-017</a>	Temperature Feel
<a href="#">P/N: 0405-095, Type: B1T-H32SS</a>	Pressure Switch
<a href="#">0403U094 / E1H-H250</a>	Switch
<a href="#">BPS312VM0020BP</a>	pressure switch
<a href="#">BTS31GVM0300M1</a>	El. temperature switch
<a href="#">425T2-04</a>	SENSOR TRANSDUCER
<a href="#">p/n: 0402-099; Type: DPD2T-M18SS</a>	pressure switch
<a href="#">P/N: 0403U085, Type: E1H-H90-Z27</a>	Pressure switch
<a href="#">0401-130 (D1T-H150SS)</a>	pressure switch
<a href="#">6901R3HC3</a>	Control Products Valves
<a href="#">p/n: 0701-035; Type: BFS-10-O</a>	flow switch



Product	Description
<a href="#">BTS34GVM0017M2</a>	
<a href="#">E1H-H90</a>	
<a href="#">425X-15 / 0400U155</a>	Pressure transducer Ex d
<a href="#">9692X-1CC-3 pn 0406u102</a>	Ex-proof pressure switch
<a href="#">BTS32NXM2.00Z4</a>	
<a href="#">0419-004 / 9211-PL1-V-GL</a>	pressure switch
<a href="#">0419-032</a>	
<a href="#">p/n: 0112-765; Type: UNS1000-MS/M20x1.5-ST1- PP18-L1/1 Lo250</a>	
<a href="#">BPS342EM0050BP (50b/420-2/G1/2F/E)</a>	
<a href="#">HB1T-CC32SS</a>	Switch
<a href="#">423H3-03-A</a>	
<a href="#">DMP333</a>	
<a href="#">B2T-A48SS-P5</a>	Pressure switch
<a href="#">B2S-H32SS</a>	pressure switch
<a href="#">0423-164</a>	PRESSURE TRANSDCUTOR
<a href="#">9675-1</a>	
<a href="#">TC9622-0-V</a>	switch
<a href="#">9675-3-V</a>	
<a href="#">0406-049 / 9675-3</a>	pressure switch
<a href="#">0423-129 / UDS3V3</a>	
<a href="#">0111-531 / UNS-VA/SB5</a>	BilgeGuard & Testoption NO(NC)
<a href="#">9023-M</a>	Directional Control Valve
<a href="#">0007-017</a>	PRESS SWITCH
<a href="#">0401-189 / D1T-M150SS</a>	pressure switch
<a href="#">CD1H-H2SS</a>	Pressure Switch
<a href="#">0417-469 / 8001-PL1-B-EA1-GE261</a>	pressure switch
<a href="#">T2H-H251S-A</a>	remote mount temperature switch
<a href="#">0111-457</a>	
<a href="#">0400U052 / 425N1-14</a>	
<a href="#">0631-053</a>	
<a href="#">0406U261 / C9612-3-CS</a>	pressure switch
<a href="#">BPS323VM0150PP</a>	Electronic Dual Pressure Switch
<a href="#">p/n: 0412-039; Type: MSPS-EE05-Q11</a>	pressure switch
<a href="#">0303-030 / GK03</a>	Magnetic level switch
<a href="#">0801-136 / 6144R3HO3</a>	
<a href="#">BPS3000 / 1670196</a>	pressure switch
<a href="#">BTLS24DV1220075</a>	
<a href="#">6142R3HO3</a>	Control Products Valves, 614 Series
<a href="#">0113=1433</a>	
<a href="#">DPD2T-H18SS</a>	diaphragm differential pressure switch
<a href="#">8111-PL1-B / 0417-011</a>	pressure switch
<a href="#">1330-4100</a>	Valve
<a href="#">0416-105 / KLM-025-M1-S1-2-V-EXI 6.0 bar fallend</a>	

Product	Description
<a href="#">0416-156 / KLM-025-M1-S1-1-V 5.0 bar (s)</a>	
<a href="#">0401U408 / D1T-A3SS-FX</a>	
<a href="#">BPS31GVM0200B</a>	Pressure switch
<a href="#">0111-327 / UNS-PP1/2NPT-PP18 1m PVC-Kabel</a>	Level switch
<a href="#">0601-063 / ML1H-H204</a>	Temperature Switch
<a href="#">0406U145 (T96201-BB3SS-S0123)</a>	Pressure Switch
<a href="#">0406U387 (T96201-BB3SS-S0171)</a>	Pressure Switch
<a href="#">0406U386 (T96201-BB3SS-S0123)</a>	Pressure switch
<a href="#">0711-260.3</a>	
<a href="#">0711-259.2</a>	
<a href="#">0711-259.3</a>	
<a href="#">8261-PL1-B</a>	pressostat compact
<a href="#">HL1X-AA351S-WS-EX</a>	
<a href="#">0405-673 / B1X-S48SS-UL</a>	
<a href="#">96201-BB1-T2</a>	pressure switch
<a href="#">p/n: 0601-049, Type: ML1H-H202S-EXI</a>	temperature switch
<a href="#">MT1H-H251S-12-A</a>	temperature switch
<a href="#">BNA-S22</a>	Level indicator
<a href="#">UNS1000-S-VA/T1,5-KLS1- VA27-L3/1-DR Lo293</a>	
<a href="#">KLM-025-M4-ST0-1-V / 0416-116</a>	
<a href="#">0406U394 / 9681X-1CC-3</a>	
<a href="#">0406U176 / 9692X-1CC-3</a>	
<a href="#">0232-016 BLP2/P/Xbar/PVXm/F level probe</a>	
<a href="#">0601U485 / THR-L2S-10X-Q10</a>	Temperature Switch
<a href="#">9022-M-A-B</a>	Directional Control Valve
<a href="#">P/N: 0111-199, Type: UNS-PA16/PA18</a>	1 m PVC cable
<a href="#">0417-062 / 8221-PL1-B-EXI</a>	pressure switch
<a href="#">CSM17-31-12B</a>	
<a href="#">CSM18-31-12B</a>	
<a href="#">81E2MB</a>	
<a href="#">8AE2MB</a>	
<a href="#">0405U001/B2T-A48SS-P5</a>	pressure switch
<a href="#">0401U395 / HD1T-AA80SS-P2-U</a>	Diaphragm Pressure Switch
<a href="#">C9612-3-W60-CS</a>	Control Products Mechanical Pressure Switches
<a href="#">0416-159 / KLM-025-M4-ST0-1-V</a>	
<a href="#">0417-020 / 8241-PL1-B</a>	pressure switch
<a href="#">0407U033 / 9048-1</a>	pressure switch
<a href="#">BPS31GVM0400B</a>	pressure switch
<a href="#">P/N: 0112=1283 Type: UNS1000-VA/T1-STDB-BN25 L3/1.1.1 Lo200</a>	Float switch
<a href="#">0111-510</a>	Bilge levels
<a href="#">BPS31EVM0150PAP</a>	Electric 2-way pressure switch
<a href="#">0417-011 / 8111-PL1-B</a>	pressure switch
<a href="#">0417-012 / 8121-PL1-B</a>	pressure switch

Product	Description
<a href="#">0417-694 / 8141-PL1-B-D-LH-ES-PC- GE354</a>	Compact Pressure Switch
<a href="#">0401-470 / D2X-M80SS-P2-EX</a>	pressure switch
<a href="#">0801U546 / 5963SOAQ3-H</a>	valve
<a href="#">BPS312VM0400BP</a>	pressure switch
<a href="#">P/N: 0711-347.5, Type: BFS-10-O-G1/2-MS-NO-ST</a>	Flow Switch
<a href="#">P/N: 0431-343, Type: UPA2-LMK358</a>	sensor
<a href="#">0601-052 / ML1H-H203</a>	temperature switch
<a href="#">0400U082 / 423T4-13</a>	Pressure transducer
<a href="#">P/N: 0406-063, Type: T96201-BB3SS-T5-J36</a>	Pressure Switch
<a href="#">0713-349.8 / BFS-30-N-G1-MS-WE-ST</a>	
<a href="#">0403-097 / E1H-H250-P7</a>	pressure switch
<a href="#">TC9622-3-Z27</a>	
<a href="#">0437-081 / 625T4-13-P3</a>	Pressure Transducer
<a href="#">BPS32PVM6000PP</a>	Pressure Sensor
<a href="#">DPD2T-A80SS-CS-L6</a>	differential pressure switch
<a href="#">9675-0</a>	Mechanical Pressure Switch
<a href="#">0122-032</a>	
<a href="#">C9622-1-H-A</a>	
<a href="#">9048-4</a>	pressure switch
<a href="#">T8014-3-33</a>	valve
<a href="#">T96201-BB3SS-T4W48</a>	Pressure Switch
<a href="#">ML1H-S203S</a>	temperature switch
<a href="#">9010206MB</a>	
<a href="#">9671X-1CC</a>	Switch
<a href="#">P/N: 0406U139, Type: L96211-BB1-S0062</a>	Pressure switch
<a href="#">T96201-BB2-T2P1</a>	Mechanical Pressure Switch
<a href="#">TXR-L2S-10-Q10</a>	temperature Switch
<a href="#">0431-630</a>	Electronic Pressure Transducers
<a href="#">0431-631</a>	Electronic Pressure Transducers
<a href="#">diaphragm for D2T-M18 (071114)</a>	diaphragm
<a href="#">6181S3HC3</a>	valve
<a href="#">0417-421 / 8151-PL1-B-LH-ES</a>	pressure switch
<a href="#">P/N: 0431-897, Type: UPA2-DMP343-100-2500-1-3 TR0-100-000</a>	
<a href="#">CSM2-33-32B-100R</a>	Pressure Switch
<a href="#">E1H-H15-P4</a>	pressure switch
<a href="#">E1H-H250-P4</a>	pressure switch
<a href="#">9022-M-A-C</a>	Valve
<a href="#">P/N: 0711-347.5, Type: BFS-10-N-G1/2-MS-NO-ST</a>	Flow Switch
<a href="#">0801-435 / 9021-M</a>	valve
<a href="#">0111-636</a>	
<a href="#">0711-257.1 / BFS-10-N-G1/2-MS-NO-ST</a>	
<a href="#">0601-387 / MT1H-H251-12</a>	temperature switch
<a href="#">0401U695 /D1T-B 3SS-U</a>	Terminal Block Diaphragm Switch

Product	Description
<a href="#">0401-852 / D1T-A150SS</a>	pressure switch
<a href="#">425X-14-P6</a>	
<a href="#">0721-015 / BFS-10-N-G1/2-SS-WE-ST- Exi 3-13 l/min</a>	flow switch
<a href="#">0111-652</a>	wires
<a href="#">0111-534</a>	wires
<a href="#">0417-701 / 8141-PL1-B-D-LH-ES-PC-GE 354</a>	Compact Pressure Switch
<a href="#">0712-348.4</a>	
<a href="#">0401-277 / D1X-H18SS-UL</a>	Pressure Switch
<a href="#">0713-267.6 / BFS-30-N-G1-MS-NO-ST</a>	Pressure sensor
<a href="#">0713-267.8 / BFS-30-N-G1-MS-NO-ST</a>	
<a href="#">E1H-H500-P4-BR</a>	pressure switch
<a href="#">0407U042 / 9048-3</a>	pressure switch
<a href="#">0402-061 / DPD1T-M3SS</a>	pressure switch
<a href="#">0402-049 / DPD1T-H3SS-EXI</a>	pressure switch
<a href="#">DPD1T-M3SS-EXI / 0402-062</a>	pressure switch
<a href="#">0434-182 / UPA53-100-XXXX-1-3/5-XXX -XXX 000</a>	pressure controls
<a href="#">P/N: 0401-302, Type: D1X-M80SS-EX</a>	pressure switch
<a href="#">D1T-H2SS</a>	Terminal Block Diaphragm Pressure Switch
<a href="#">MT1H-H154-A</a>	temperature switch
<a href="#">Nr. 0713-352.10 Type BFS-30-N-G1-SS-WE-ST</a>	
<a href="#">BPS34GEM0010BP</a>	Pressure transmitter
<a href="#">E1H-H-VAC-P6 / 0403-054</a>	Pressure switch
<a href="#">BPS342VM0010BP</a>	pressure switch
<a href="#">0721-089.6 / BFS-10-N-G1/4-MS-NO-ST- EXI 0,5-3 l/min</a>	
<a href="#">0431-041 / UPA2/1,6b/020/G1/4E/DIN/ E</a>	
<a href="#">0400U139 / 423X-18-Z10</a>	pressure transducer
<a href="#">423X-12-Z10</a>	pressure transducer
<a href="#">0332-624 / BNA-S22</a>	level gauge
<a href="#">P/N: 0419-017, Type: 9311-PL1-V-VA-GL-PC</a>	pressure switch special
<a href="#">P/N: 0711-334.2, Type: BFS-10-O-G1-MS-WE-ST</a>	
<a href="#">0405U728 / B1T-H12SS-CS</a>	Pressure Switch
<a href="#">96211-BB5-S0444</a>	Pressure Switch
<a href="#">BPS32GEM0010B</a>	
<a href="#">BPS34GVM0400B</a>	pressure switch
<a href="#">0405-316 / B2T-M32SS</a>	pressure switch
<a href="#">E1H-H250-BR</a>	ECON O TROL
<a href="#">0332=1419 / BNA-S21-G1/2" VA30/02-MA-PO LM0,5&lt;1,0m</a>	
<a href="#">0112=1959</a>	
<a href="#">UNS1000-MS/T1/2-M12x1 BN18-L1-TS70/2 Lo401-600</a>	float switch
<a href="#">E1H-G250-P4-RD</a>	pressure switch
<a href="#">UAS3-5-5</a>	
<a href="#">0431-844 / UPA2V2/600b/420/G1/2F DIN/F</a>	
<a href="#">0416-159 / KLM-025-M4-ST0-1-V 14 bar decreasing (f)</a>	

Product	Description
<a href="#">0416-173 / KLM-025-M4-ST0-1-V 8,5 bar increasing (s)</a>	
<a href="#">0403-099 / E1H-H250-P7-ST1</a>	pressure switch
<a href="#">425H3-14-P1</a>	TRANSDUCER
<a href="#">8CE1CBS</a>	Pressure switch
<a href="#">D1X-A80SS-UL</a>	EXPLOSION PROOF DIAPHRAGM SWITCH
<a href="#">p/n: 0122-002, Type: UNS1000-VA/T1-ST1-VA27- L2/1(2)</a>	
<a href="#">0111-641 / UNS-MS1/4NPT-K1- BN30/1(2)-TP60/2</a>	Level Switch
<a href="#">0400U034 / 423T2-04-A</a>	Pressure transducer
<a href="#">55320101</a>	Press. Switch
<a href="#">B1T-H48SS</a>	Bourdon tube - pressure switch
<a href="#">0406-017 / C9622-0</a>	pressure switch
<a href="#">0801-024 / 143R3WC3</a>	valve
<a href="#">D1X-A80SS-EX</a>	Explosion Proof Diaphragm Switch
<a href="#">0332-625</a>	Visual level meter
<a href="#">0411-008 / EPD1S-AA40</a>	pressure switch
<a href="#">BPS31GVM0400BP</a>	Pressure switch
<a href="#">T2X-S251S-EX</a>	Switch, Temperature, Explosion Proof
<a href="#">0406U151 / 96201-BB4-Q46</a>	pressure switch
<a href="#">0423-192 / UDS3-16-N-6</a>	
<a href="#">BPS35GVM0400B / 400b/0-10/G1/4E/F</a>	Electronic Pressure Switch
<a href="#">0602U041 / T2H-H251-A</a>	UL version/USA
<a href="#">9001-M</a>	valve
<a href="#">0403-329 / E1H-M250-P6-PLS-V</a>	pressure switch
<a href="#">0403U096 / E1H-H90-P6-PLSV</a>	Pressure Switch
<a href="#">0112=1086 / UNS1000-MS/T1/2-M12x1- BN18-L1/1-TS70/2-GE275</a>	
<a href="#">B1X-S48SS</a>	pressure switch
<a href="#">p/n: 0713-267.2, type: BFS-30-N-G1-MS-NO-ST</a>	
<a href="#">914-0069 / 22507-3B</a>	Washer
<a href="#">BFS-10-N-G1/4-MS-NO-ST (0711-256.3)</a>	
<a href="#">P/N: 0405-136, Type: B1T-M48SS</a>	Pressure switch
<a href="#">D2T-M150SS-EXI</a>	pressure switch
<a href="#">0111-465 / UNS-MS1/8-K3-BN25/1(2)</a>	level switch
<a href="#">0402-066 / DPD1T-M80SS</a>	pressure switch
<a href="#">0403-146 / E1H-H90-P7</a>	pressure switch
<a href="#">0431-705</a>	
<a href="#">0400U117/ 425X-07-A-Q19</a>	Pressure transmitter
<a href="#">MSPS-JJ15SS</a>	pressure switch
<a href="#">27-010001</a>	Temp switch
<a href="#">BPS31GVM0010B</a>	pressure switch
<a href="#">9675-3</a>	pressure switch
<a href="#">C9612-3</a>	Pressure switch
<a href="#">0401-573 / D1T-GM18SS-EXI</a>	pressure switch
<a href="#">P/N: 0405-132, Type: B1T-M32SS</a>	pressure switch

Product	Description
<a href="#">0113=1318 / UNS2000-VA/T2-KX4-VA52- L2/1.2-DUAL-Exi Lo245</a>	
<a href="#">0405U148 / B2T-M12SS-CS</a>	Bourdon tube switch
<a href="#">0221-440 / USE3000-VA/T2-KLS-VA44 R12-250-MU3L Lo342</a>	level pointer
<a href="#">0303-031</a>	Limit value switch
<a href="#">0303-031 / GK03</a>	Limit value switch
<a href="#">P/N: 0701-297, Type: BFS-10-N-G1/4 MS-NO-ST**</a>	
<a href="#">BPS342VM0400BP</a>	pressure switch
<a href="#">E1H-0016 Type E1H - H90 - P4</a>	
<a href="#">0710-007.5</a>	VARIABLE AIR FLOW SWITCH
<a href="#">0801U669 / F20415S3WQ2-1</a>	Valve
<a href="#">0711-256.4 / BFS-10-N-G1/4-MS-NO-ST</a>	
<a href="#">BT5-T5-11BG-P16P</a>	Industrial Pressure Transducer
<a href="#">0403-142 / E1H-H90-P6-PLS</a>	Mechanical pressure switch
<a href="#">DPD1T-GM150SS</a>	
<a href="#">627T4-05</a>	pressure transducer
<a href="#">0406U077 / A9675-0-AA</a>	Pressure switch
<a href="#">0111-369 / UNS-VA1/8NPT-BN30/1 1 m PVC-Cabel</a>	
<a href="#">625H4-05</a>	pressure transducer
<a href="#">425T4-14-Z15</a>	pressure transducer
<a href="#">205P6WC3</a>	Valve
<a href="#">239537</a>	
<a href="#">BPS342FM0400BPQ6</a>	pressure sensor
<a href="#">P/N: 0406-023, Type: C9622-3</a>	pressure switch
<a href="#">0400U116 / 425X-03</a>	
<a href="#">0400U104 / 425X-08</a>	
<a href="#">625T4-16-Q2 (0437-036)</a>	transducer
<a href="#">BPS34GVM0010B</a>	pressure switch
<a href="#">P/N: 0417-014, Type: 8141-PL1-B</a>	pressure switch
<a href="#">T2X-S251S-A-EX</a>	Mechanical temperature switch
<a href="#">0631-112 / UTA2/-30+150C/420/G1/4E M12/F/17 KM</a>	
<a href="#">P/N: 0704-021, Type: BFS-40-N-G1/2-MS-NO-ST HT 0,2 ... 4,0 L/min</a>	
<a href="#">BPS33GEM0200B</a>	
<a href="#">907-0357</a>	Connector
<a href="#">BPS31GVM0050B</a>	ELECTRONIC PRESSURE SWITCH
<a href="#">BPS38GVM0050B</a>	ELECTRONIC PRESSURE SWITCH
<a href="#">E1H-H500-P4-EXI</a>	pressure switch
<a href="#">CRK-77A-240A-30-8-70-01*</a>	
<a href="#">P/N: 0303-033, Type: GK03 5m</a>	PVC cable/cable limit switch
<a href="#">P/N: 0406-004, Type: C9612-1</a>	pressure switch
<a href="#">P/N: 0403-505, Type: E1H-H250-P7-V-ST1</a>	pressure switch
<a href="#">9675-2</a>	
<a href="#">P/N: 0405-300, Type: B2T-M12SS</a>	pressure switch
<a href="#">68/30010</a>	conversion kit

Product	Description
<a href="#">BPS382VM0050BP</a>	
<a href="#">UNS-PP16-PP18</a>	
<a href="#">26.600 G-2502-R-3-5-100-300-1-000</a>	
<a href="#">BT6-T5-43BG-P9C</a>	
<a href="#">BPS34GEM0002BAPQ1</a>	
<a href="#">B1T-H32SS-FX</a>	
<a href="#">D1H-A80SS-FX</a>	
<a href="#">A9692X-2CC-3</a>	
<a href="#">208128 / 906-0045</a>	Screw
<a href="#">208129-C / 906-0040</a>	
<a href="#">4518014742 / UNS-PP16/18</a>	float switch
<a href="#">BT5-Q50-16BG-P9C</a>	
<a href="#">0406u106 / 9681X-1CC-2</a>	pressure switch
<a href="#">BT5-T4-16BG-C</a>	
<a href="#">0801U152 / 6182S3HC3-MC</a>	Valve
<a href="#">B2T-M12SS/ 0405-300</a>	pressure switch
<a href="#">425T4-22</a>	
<a href="#">T96201-BB3-T2-Z17</a>	Pressure Switch
<a href="#">ART.NR.: 0417-294 / TYPE: 8161-PL1-V-LH-GE42</a>	
<a href="#">UNS1000-S-VA/T1-KLS1 BN18HV-L1/3-CBM Lo82</a>	level temp sensor
<a href="#">UNS1000-VA/T1-KL6-VA27-L1/1(2)-HT Lo82-1000 (0122-260)</a>	Level Gauge
<a href="#">908-0361</a>	Connector
<a href="#">0113=1290</a>	
<a href="#">P/N: 0403-113, Type: E1H-H500-P6-F2</a>	pressure switch
<a href="#">0801u126 / 6142R3HC3</a>	Valve
<a href="#">P/N: 0111-708, Type: PP18-DM-GE301</a>	PVC-Cable
<a href="#">0713-354.2/ BFS-30-O-G1-MS-WE-ST</a>	
<a href="#">P1X-B30-S0426</a>	Pressure Switch
<a href="#">0711-257.7</a>	Flow meter
<a href="#">P/N: 0401-459, Type: D2X-M150SS-EX</a>	pressure switch
<a href="#">0401U934 / D2T-H18SS-CS-U</a>	Pressure switch
<a href="#">P/N: BPS32NVM0150P, Type: 150p/420-1/1/4NE/F</a>	ELECTRONIC DUAL PRESSURE SWITCH
<a href="#">0111-591 / UNS-VA1/4NPT-K5- VA52/1(2) 5m PVC-Cable</a>	
<a href="#">0111-594 / UNS-VA1/4NPT-K5-VA52/3 5m PVC-Cable</a>	
<a href="#">0111-715 / UNS-VA1/4NPT-K5-VA52/3- HT 5m Si-cable</a>	
<a href="#">0403U095 / E1H-H15</a>	UL Pressure Switch
<a href="#">B2T-M12SS D</a>	pressure switch
<a href="#">0405U270 / B2T-M32SS-CS</a>	Pressure Switch
<a href="#">0402U123 / DPD2T-A150SS</a>	pressure switch
<a href="#">D2T-M80SS-EXI / 0401-418</a>	Pressure switch
<a href="#">P/N: 0416-116, Type: KLM-025-M4-ST0-1</a>	pressure switch
<a href="#">P/N: 0401-373, Type: D2T-H18SS</a>	pressure switch
<a href="#">0416-119, KLM-025-M4-ST0-1-V 0501 328 133</a>	

Product	Description
<a href="#">B1X-M12SSEX / 0405-184</a>	pressure switch
<a href="#">P/N: 0406-038, Type: 96201-BB3-T2</a>	pressure switch
<a href="#">9681X-1CC-2-S0271</a>	Pressure switch
<a href="#">UNS2000-VA/T3/4-ST1-VA44 HT-L1/1-GE392 Lo135</a>	
<a href="#">0122-153 / UNS1000-VA/T1-KX4-VA27- L2/1(2)-Exi Lo147-500</a>	Level sensor
<a href="#">0801-120 / 6141R3HC3</a>	Directional hydraulic valve
<a href="#">0225-108 / USE3200-VA/FLS-KLS-VX80 R12-900-DR-MUEX Lo1350</a>	level sensor
<a href="#">P/N: 0111-717, Type: UNS-PP16-PP18-G3/4-GE301</a>	10m PVC-Cable
<a href="#">P/N: 0431-620, Type: UPA2-DMP343-100-1000-1-3 -100-100-000</a>	sensors
<a href="#">L96211-BB2SS-S0639</a>	Pressure Switch
<a href="#">0406u103 / 9692X-1CC-4</a>	Ex-proof pressure switch
<a href="#">P/N: 0603-093, Type: T1X-H351S-A-EX</a>	temperature switch
<a href="#">UPA2-LMK382-H-566-XXXX-K-2-H-1-4-B-003-000</a>	pressure switch
<a href="#">P/N: 0405-223, Type: B2S-M48SS</a>	pressure switch
<a href="#">0113=1432</a>	
<a href="#">0431-0620</a>	level sensors
<a href="#">PSA30.BPS3.4.G.V.M.0100B.P</a>	Electronic pressure switch and transmitter
<a href="#">BTS312VM0050M1</a>	Temperature sensor
<a href="#">9692X-1CC-3 / 0406U103</a>	Pressostat
<a href="#">BLP2/P/XmWs/PVXm/F</a>	level probe
<a href="#">0332-604</a>	
<a href="#">0402-102 / DPD2T-M80SS</a>	pressure switch
<a href="#">P/N: 0403-074, Type: E1H-H15-P6-T</a>	pressure switch
<a href="#">0712-263.10 / BFS-20-O-G1-MS-NO-ST</a>	Sensor
<a href="#">0417-136 / 8151-PL1-B-LH</a>	pressure switch
<a href="#">P/N: 0303-027, Type: GK03-EXI with 3 m Si-Kabel</a>	Limit switch
<a href="#">P/N: 0801-088, Type: 6145R3HO3</a>	valve
<a href="#">BPS344VM0400B</a>	
<a href="#">RK1457</a>	
<a href="#">0405-028 / B1S-M12SS</a>	pressure switch
<a href="#">E1H-H90-Z27</a>	Pressure switch
<a href="#">0122-144 / UNS1000-MS/T1-STDB-BN25- L2/1(2) Lo107...500.Gr.3</a>	
<a href="#">0221-374 / XT-R12 5250 &gt;= Lm &gt; 5000</a>	
<a href="#">0419-037 / 9A21-PL1-V</a>	pressure switch
<a href="#">BPS34GVM00.5BP (500mbR/420-2/G1/4E/E)</a>	Pressure switch
<a href="#">BPS34GVM0001BVP</a>	electronic pressure switch
<a href="#">P/N: 0403U401, Type: E1H-G90-RD-LC</a>	Pressure switch-UL
<a href="#">BT5-T5-36BG-P16P</a>	
<a href="#">E1H-R-VAC-P6/ 0403-179</a>	
<a href="#">E1H-H500-P8/ 0403-118</a>	pressure switch
<a href="#">BNA-S22-3/4"150-RF-VA30/ /02-MA-GE409 LM=1.0&lt;1.5m (0332=1037)</a>	
<a href="#">UTA2/0+120C/420/G1/4E/F/ (0631-063)</a>	
<a href="#">455ET4-01-P4-Z050</a>	



Product	Description
<a href="#">0801U057 / A147R3WC2</a>	Valve
<a href="#">BPS312FM0040BPQ6</a>	pressure switches
<a href="#">BPS342FM0040BPQ6</a>	pressure switch
<a href="#">UPA2-DMP333</a>	
<a href="#">0711-339.7</a>	
<a href="#">6143R3HC3/ 0801-130</a>	
<a href="#">82C1-PL1-B-UL</a>	pressure switch
<a href="#">XT-R12-LM600</a>	LEVEL TRANSMITTER
<a href="#">T96201-BB3SS-T5-W36</a>	
<a href="#">0602-121 / T2H-H251S-A</a>	temperature switch
<a href="#">0417-385/ 8141-PL1-B-LH-ES</a>	pressure switch
<a href="#">9681X-1CC-2-W79</a>	PRESSURE SWITCH
<a href="#">CERTIFICATE OF COMPLIANCE-B</a>	
<a href="#">P/N: 0303-038 Type: GK03L 2m</a>	
<a href="#">0111-704 / UNS-PP16-PP18-G3/4-GE298 5m PVC-Kabel</a>	
<a href="#">0417-710</a>	Pressure switch
<a href="#">9681X-1CC-3-B-K</a>	PRESS SWITCH, EXPLOSION PROOF
<a href="#">BFS-30-N-G1-MS-WE-ST / 0713-349.6</a>	
<a href="#">BFS-30-N-G1-MS-WE-ST / 0713-349.10</a>	
<a href="#">P/N: 0231-016</a>	
<a href="#">P/N: 0499-027</a>	
<a href="#">0111-631</a>	BILGE LEVEL SWITCH
<a href="#">0112=1086 / UNS1000-MS/T1/2-M12x1</a>	
<a href="#">0402-169 / DPD2T-GH150SS-ST3</a>	pressure switch
<a href="#">96201-BB2-T2-P1Z17</a>	Pressure Switch
<a href="#">0417-021 / 8251-PL1-B</a>	pressure switch
<a href="#">906-0919</a>	
<a href="#">906-0946</a>	
<a href="#">906-0947</a>	
<a href="#">BPS34GEM0600BP</a>	Pressure Sensor
<a href="#">926-0811</a>	Junction Box
<a href="#">0406U123 / 96201-BB2-T2</a>	pressure switch
<a href="#">0406U172 / 96201-BB2-T2-P1</a>	Pressure switch
<a href="#">0417-775</a>	