



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## BDC

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">ALS10/4609AKS-B</a>	Speed sensor
<a href="#">C8B/0045PVG</a>	BDC 4 WIRE CORNER CONNECTOR
<a href="#">DCA12/5609KS</a>	INDUCTIVE SENSOR
<a href="#">DCA 18/4309KS</a>	INDUCTIVE SENSOR
<a href="#">DCA18/4B08KSH2-0.240</a>	INDUCTIVE SENSOR CABLE M.0,17
<a href="#">DCA12/5629KS</a>	INDUCTIVE SENSOR
<a href="#">DCA8/4609KS</a>	INDUCTIVE SENSOR
<a href="#">DCA8/5909KS</a>	Inductive sensor
<a href="#">DSE12/4309KS</a>	sensor
<a href="#">DCA5/5B09KS</a>	Inductive sensor
<a href="#">DCA12/4609KST-0.12</a>	INDUCTIVE TEMPERATURE SENSOR
<a href="#">DSE6.5/4619LKS</a>	inductive sensor
<a href="#">DSE8 / 4609KS</a>	Induktiver Sensor
<a href="#">DC12/5600-3 optional</a>	
<a href="#">DCA30/4609KS</a>	Sensore induttivo
<a href="#">DCA12/4609KS</a>	Inductive proximity sensor
<a href="#">DCA5/5919KS</a>	INDUCTIVE SENSOR
<a href="#">DC12/5600</a>	INDUCTIVE SENSOR
<a href="#">ALS10/4609AAKS23676/4 / new version ALS10/4609AKS-B</a>	Rotary sensor
<a href="#">DCA8/4309KT</a>	INDUCTIVE SENSOR
<a href="#">DCA12/5608NKS</a>	INDUCTIVE SENSOR
<a href="#">DCE12/43C9KT</a>	INDUCTIVE SENSOR
<a href="#">DCA5/4909KS</a>	INDUCTIVE SENSOR
<a href="#">DCA8/5919KS</a>	SENSORE INDUTTIVO
<a href="#">DCA 12/4309KS</a>	INDUCTIVE SENSOR
<a href="#">DCA18/5609KSJ</a>	INDUCTIVE SENSOR
<a href="#">DCA18/4609KT</a>	LIMIT SWITCH (INDUCTIVE SENSOR)
<a href="#">DCAT/4729KS</a>	sensor
<a href="#">DCA30/4629KS</a>	sensor
<a href="#">DCA5/4609KS</a>	INDUCTIVE SENSOR
<a href="#">DCA30/4619KT</a>	Inductive sensor
<a href="#">DCA 12/4309KST</a>	Homing Sensor
<a href="#">BRS12X/4609KJ</a>	Speed sensor
<a href="#">ERB1109500R</a>	Encoder
<a href="#">0736237369B</a>	Limit Switches

Product	Description
<a href="#">0736237350A</a>	
<a href="#">DCA18/4609KS</a>	Inductive sensor
<a href="#">ERB119500R</a>	Encoder
<a href="#">ERB1000200E</a>	Encoder
<a href="#">DCAY/4609KS</a>	Inductive sensor
<a href="#">DCZ/5600</a>	Inductive sensor
<a href="#">C11/0045PVG</a>	Connector
<a href="#">C8B/00410PRN</a>	BDC 4 WIRE CORNER CONNECTOR
<a href="#">C8B/00410PVG</a>	BDC 4 WIRE CORNER CONNECTOR
<a href="#">C8B/0045PRN</a>	BDC 4 WIRE CORNER CONNECTOR
<a href="#">DCA18/4629KS</a>	INDUCTIVE SENSOR
<a href="#">DC12/5600A</a>	INDUCTIVE SENSOR
<a href="#">DCA8/4908KS</a>	Inductive Sensor
<a href="#">DCA8/4918KS</a>	Inductive Sensor
<a href="#">DSA8/4909KS</a>	Inductive sensor
<a href="#">DCA18/4A09KSJMA</a>	INDUCTIVE ATEX SENSOR
<a href="#">DCA18/4A09KSJMB</a>	INDUCTIVE ATEX SENSOR
<a href="#">DCA12/5608KSC2-07</a>	INDUCTIVE SENSOR
<a href="#">DCA5/5909KS</a>	INDUCTIVE SENSOR
<a href="#">DCA12/5608KS</a>	sensor
<a href="#">C12/0032PRN</a>	Sensor cable
<a href="#">0736237351C</a>	SINGLE PROXIMITY LIMIT SWITCH
<a href="#">DCA18/5609KS</a>	INDUCTIVE SENSOR
<a href="#">DSA8/4609KS</a>	INDUCTIVE SENSOR
<a href="#">DSA30/5308KS</a>	INDUCTIVE SENSOR
<a href="#">DCA30/4629KT</a>	INDUCTIVE SENSOR
<a href="#">AC18/4609S</a>	INDUCTIVE SENSOR
<a href="#">DCA12/43C9KT</a>	INDUCTIVE SENSOR
<a href="#">DCA8/4608KS</a>	INDUCTIVE SENSOR
<a href="#">2736240995F</a>	SINGLE PROXIMITY LIMIT SWITCH
<a href="#">DCX/4700</a>	INDUCTIVE SENSOR
<a href="#">DCA 12/4609KSMB-10</a>	ATEX INDUCTIVE SENSOR
<a href="#">DCA12P/5609KSJ-10PR</a>	
<a href="#">DCA8/4609KT</a>	INDUCTIVE SENSOR
<a href="#">BMS12/4609KS</a>	METAL MAGNETIC SENSOR
<a href="#">PVC CABLE SUPPLEMENT</a>	
<a href="#">BKS30S/4329KS</a>	CAPACITIVE SENSOR