



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Cofi

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

| Product                                 | Description                     |
|---|---------------------------------|
| <a href="#">TRK1-30CVD</a>              | TRANSFORMER                     |
| <a href="#">TRK1-30CVD 0111229099</a>   | Transformer                     |
| <a href="#">TRS830P/6 220V</a>          | Electric Valve                  |
| <a href="#">160300050</a>               | Ignition transformer            |
| <a href="#">TRE820PIS0230</a>           | ELECTRONIC IGNITION TRANSFORMER |
| <a href="#">TRS820p/33</a>              | Trafo                           |
| <a href="#">TRK1-20CVD</a>              | Electric Valve                  |
| <a href="#">TRS820P/T OEM</a>           | transformer                     |
| <a href="#">TRE820P/16</a>              | ignition transformer            |
| <a href="#">830P</a>                    | Transformer                     |
| <a href="#">TRE820</a>                  | Transformer                     |
| <a href="#">TIPO 1020 T 35 E</a>        | Transformator                   |
| <a href="#">E820P</a>                   | Ignition transformer            |
| <a href="#">TRS818C/12</a>              | Transformator                   |
| <a href="#">TRK2-30PF VD</a>            | Trafo (Ignition transformer)    |
| <a href="#">TRS1220</a>                 | TRANSFORMER                     |
| <a href="#">TRG1230</a>                 | ignition transformer            |
| <a href="#">TRK2P-230</a>               | Electric Valve                  |
| <a href="#">TRE 820P/4</a>              | Ignition transformer            |
| <a href="#">TRK 1-20 PCUVD</a>          | Electric Valve                  |
| <a href="#">TRG 1035/4</a>              | IGNITION TRANSFORMER            |
| <a href="#">TRG823PC</a>                | Ignition transformer            |
| <a href="#">09CA036111</a>              | Electric Valve                  |
| <a href="#">TRS 820P/3</a>              | ignition-transformer            |
| <a href="#">TRK1-20PCUVD 120v</a>       | Electric Valve                  |
| <a href="#">TRG1020PC</a>               | Ignition transformer            |
| <a href="#">TRS1020/21</a>              | Ignition transformer            |
| <a href="#">TRS820P/39</a>              | TRANSFORMER                     |
| <a href="#">HV cable for TRS820P/39</a> | High Voltage Cable              |
| <a href="#">TRG623PC</a>                | TRANSFORMER                     |
| <a href="#">TRE820PISO3</a>             | Ignition Transformer            |
| <a href="#">TRE820PISO S3</a>           | Ignition Transformer            |
| <a href="#">TRS812PCISO5</a>            | TRANSFORMER                     |
| <a href="#">4.622-021.0</a>             | Ignition transformer            |
| <a href="#">TRG823PC/2</a>              | ignition transformer            |

| Product  | Description                               |
|--|---|
| <a href="#">TRS820/17</a>                      | Transformer                               |
| <a href="#">CAVOTRK 09CA0A1882</a>             | Primary Cable for TRK Series Transformers |
| <a href="#">160 Type TRG623PCUS</a>            | IGNITION TRANSFORMER                      |
| <a href="#">TRG820PC</a>                       | Transformer                               |
| <a href="#">TRS820P</a>                        | Ignition transformer                      |
| <a href="#">09CA018130</a>                     | High Voltage Cable for TRK2-30PVD         |
| <a href="#">TRS818C/S</a>                      | Ignitor                                   |
| <a href="#">17GOST000K</a>                     | Ignition Transformer                      |
| <a href="#">TRS812C S1</a>                     | transformer                               |
| <a href="#">1020</a>                           | Transformer                               |
| <a href="#">TRL12-30C</a>                      | Transformer                               |
| <a href="#">TRS723P US</a>                     | Transformer                               |
| <a href="#">TRE 210 PC ( Code: 010956880 )</a> | Transformer                               |
| <a href="#">09CA0A1882</a>                     | cable                                     |
| <a href="#">160300260</a>                      | Connector cable                           |
| <a href="#">Successor for TRG1035/6</a>        | ignition transformer                      |
| <a href="#">TRK2-30UVD</a>                     | TRANSFORMER                               |
| <a href="#">TKR 2-40HK</a>                     | Ignition transformer,                     |
| <a href="#">TRS1020/23</a>                     | TRANSFORMER                               |
| <a href="#">11PC112031</a>                     | Connector                                 |
| <a href="#">11PC112013</a>                     | Connector                                 |
| <a href="#">04PL041442</a>                     | COFI TERMINAL COVER                       |
| <a href="#">11PC112010</a>                     |   |
| <a href="#">17G0172601</a>                     | Silicone hood                             |
| <a href="#">TRE820PS4</a>                      | Ignition Transformer                      |
| <a href="#">TRK1-20PCVD</a>                    | transformer                               |
| <a href="#">17GO172601</a>                     | HOOD                                      |
| <a href="#">TRS820PISO3</a>                    | IGNITION TRANSFORMER                      |
| <a href="#">P/N:160300220; Type:TRS8030P</a>   | Ignition transformer                      |
| <a href="#">TRS820P (160300200)</a>            | Ignition transformer                      |
| <a href="#">TRK30PUFVD</a>                     | Transformer                               |
| <a href="#">TRS820</a>                         | TRANSFORMER                               |
| <a href="#">TRE 820 P 15</a>                   | IGNATION TRANSFORMER                      |
| <a href="#">TRS820P/8 OEM</a>                  | Transformer                               |
| <a href="#">TRS820P/9</a>                      | Ignition Transformer                      |
| <a href="#">11PC112018</a>                     | Ignition Transformer                      |
| <a href="#">17GO172605</a>                     | Ignition Transformer                      |
| <a href="#">TRS 820 P/11</a>                   | transformer                               |
| <a href="#">RRK2-40 HD #0114531018</a>         | High-Voltage Ignition Transformer         |
| <a href="#">TRE 820 PISO</a>                   | transformer                               |
| <a href="#">TRK2-40 HD</a>                     | Ignition transformer                      |
| <a href="#">TRS820P/2</a>                      | Ignition Transformer                      |
| <a href="#">COFI TRE 820 PISO1</a>             | .   |

| Product                                | Description                              |
|--|--|
| <a href="#">820P</a>                   | Ignition Transformer                     |
| <a href="#">Type: 820 P</a>            | Ignition Transformer                     |
| <a href="#">TRG1020C</a>               | ignition transformer                     |
| <a href="#">TRG1020C10</a>             | transformer                              |
| <a href="#">TRS610PC/5</a>             | TRANSFORMER                              |
| <a href="#">TRK2-30PVD</a>             | Transformer                              |
| <a href="#">TRK2-35</a>                | Transformer                              |
| <a href="#">TRS818C/17</a>             | TRANSFORMER                              |
| <a href="#">TRG1020C22</a>             | Ignition Transformer                     |
| <a href="#">TRS820P/T2 230/800</a>     | COFI ignition transformer                |
| <a href="#">TRS818PC</a>               | TRANSFORMER                              |
| <a href="#">TRE 210 PC</a>             | Ignition Transformer                     |
| <a href="#">E820P TRE820P</a>          | Ignition Transformer                     |
| <a href="#">11PC112011</a>             | SOCKET                                   |
| <a href="#">TRK2-40PVD</a>             | Ignition Transformer                     |
| <a href="#">TRW1P4M</a>                | Ignition Transformer                     |
| <a href="#">STAFFA 3S</a>              | Ignition Transformer                     |
| <a href="#">09CA036108</a>             | cable                                    |
| <a href="#">TRK2-30PUVD</a>            | COFI TRANSFORMER                         |
| <a href="#">Mod. TRE820PISO</a>        | TRANSFORMER                              |
| <a href="#">TRS820P/17</a>             | Ignition Transformer                     |
| <a href="#">09CA036105</a>             | full cable                               |
| <a href="#">TRK1-30PCVD</a>            | TRANSFORMER                              |
| <a href="#">TRH2-30CU</a>              | TRANSFORMER                              |
| <a href="#">TRE 820 P</a>              | ignition transformer                     |
| <a href="#">TRK2-40PHK</a>             | TRANSFORMED                              |
| <a href="#">E820PISO2</a>              | TRANSFORMER                              |
| <a href="#">TRG1035</a>                | transformer                              |
| <a href="#">TRG 832 PC/2</a>           | Ignition Transformer                     |
| <a href="#">TRG1230/4 / 0215000839</a> | transformer                              |
| <a href="#">TPITK400</a>               | Transformer                              |
| <a href="#">TRS820P/18</a>             | Ignition Transformer                     |
| <a href="#">TRK2 -40VD COFI 220V</a>   | IGNITION TRANSFORMER                     |
| <a href="#">TRS830P</a>                | Ignition Transformer                     |
| <a href="#">TRS820P.230V (#57607)</a>  | Ignition Transformer                     |
| <a href="#">TRS818C</a>                | Ignition transformer                     |
| <a href="#">TRS515PC</a>               | TRANSFORMER                              |
| <a href="#">TRS723P US4</a>            | TRANSFORMER                              |
| <a href="#">TRS830P/6</a>              | TRANSFORMER                              |
| <a href="#">TRH2-30C</a>               | TRANSFORMER                              |
| <a href="#">TRK1-30CHD</a>             | ELECTRIC TRANSFORMER FOR PRESSURE WASHER |
| <a href="#">TRL24-30C</a>              | Ignition Transformer                     |
| <a href="#">TRK2-30PUFVD</a>           | Ignition Transformer                     |

| <b>Product</b>                           | <b>Description</b>                |
|--|-----------------------------------|
| <a href="#">connector for TRS723P US</a> | Connector for TRS723P US          |
| <a href="#">TRG623PC-US</a>              | Ignition Transformer              |
| <a href="#">TRS515PCISO1</a>             | TRANSFORMER                       |
| <a href="#">TRG1020C/2</a>               | transformer                       |
| <a href="#">TRS820P/32</a>               | Ignition Transformer              |
| <a href="#">TRS830P.230V</a>             | Ignition Transformer              |
| <a href="#">TRS820PISO</a>               | Transformer                       |
| <a href="#">TRK1-20CUVD</a>              | Ignition Transformer              |
| <a href="#">TRL12-30PC</a>               | Electronic Transformers           |
| <a href="#">TRS820P/T1</a>               | TRANSFORMER                       |
| <a href="#">TRE820P/10</a>               | COFI TRANSFORMER                  |
| <a href="#">TRG 835P</a>                 | 220V 1X8000V IGNITION TRANSFORMER |
| <a href="#">TRG1020C25</a>               | TRANSFORMER                       |
| <a href="#">mod. TRK1-30CVD</a>          | TRANSFORMER                       |