



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онџл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Elektrogas

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">VMR3-2</a>	Safety solenoid valve
<a href="#">Coil for VRM 0, RP 3/8", 230 VAC</a>	Coil for safety solenoid valve
<a href="#">Coil for VML6-2 110 VAC 50/60 HZ, IP 54</a>	
<a href="#">VML1-5</a>	
<a href="#">VML2 - 3/4"</a>	Safety solenoid valve
<a href="#">VML-3-RP1 - 230 VAC - 50/60 Hz - 360 mbar (stock)</a>	Safety solenoid valve
<a href="#">GV-VMR1-5.B</a>	safety solenoid valve
<a href="#">GV-VMR1-2</a>	Safety solenoid valve
<a href="#">VMR12-OTN, 110V</a>	
<a href="#">VMR12OTN</a>	solenoid valve
<a href="#">VMR1-5, 1/2", 230V AC</a>	solenoid valve
<a href="#">GV-VMR2-5</a>	Safety solenoid valve
<a href="#">VMR35-5</a>	Safety solenoid valve
<a href="#">VMR 3-5 500 mbar, Rp1, 230V AC</a>	valve 500 mbar
<a href="#">ETGV-MS-7/8-110V</a>	spare spool
<a href="#">VMR7-2 – DN65</a>	Safety solenoid valve
<a href="#">VMR0</a>	Solenoid valve
<a href="#">VMR4.L, 360 mbar, Rp 1 1/2"</a>	Safety solenoid valve
<a href="#">VMR8-3</a>	Safety solenoid valve
<a href="#">VMR35-5, Thread 1 1/4", 500 mbar, 110V</a>	Gas solenoid valve
<a href="#">VMR4-L-5, Thread 1 1/2", 500 mbar, 110V</a>	Valve
<a href="#">VMR6-L-5, Thread 2", 500 mbar, 110V</a>	Valve
<a href="#">VMRQ</a>	solenoid valve
<a href="#">VMR 1-2, RP 1/2</a>	solenoid valve
<a href="#">EVRMNC8A</a>	Gas Solenoid Valve
<a href="#">VMR8-2</a>	Safety solenoid valves
<a href="#">VMR0-5</a>	Safety solenoid valve
<a href="#">VFH7</a>	
<a href="#">VMR4-2</a>	valve solenoid
<a href="#">SR8</a>	magnetic drive
<a href="#">Set LH- optional</a>	
<a href="#">Set D</a>	
<a href="#">VFH7, DN 65</a>	
<a href="#">VMR0-2.C</a>	ELEKTROGAS-Ventil
<a href="#">ETGV-MS-0A</a>	

Product	Description
<a href="#">VMR12-OTN, 230V</a>	
<a href="#">VMR1, 110 V/50/60 Hz, 20 W</a>	Elektrogas-Ventil
<a href="#">VMR3, 230 V/50/60 Hz, 35 W</a>	Elektrogas-Ventil
<a href="#">VML6-2</a>	vALVE
<a href="#">VMR6-L-5.B</a>	solenoid safety valve
<a href="#">VMR 4 (GV-VMR4)</a>	safety solenoid valve
<a href="#">VML4, RP 1 1/2", 230 VAC 50/60 Hz, 45 W/180 W, 500 mbar</a>	
<a href="#">Coil for valve VMR3-5.B, 110V, 500 mbar</a>	
<a href="#">VMR3-5.B</a>	Safety solenoid valve
<a href="#">VML8, DN 80, 230 VAC 50/60 Hz, 35 W, 360 mbar</a>	Safety solenoid valve
<a href="#">VML3 RP 1" (stock)</a>	safety solenoid valve
<a href="#">VMR3-5</a>	Safety solenoid valve
<a href="#">VMR8-3 (Unsere Artikelnummer: GV-VMR8)</a>	safety solenoid valve
<a href="#">VMR6-5.K</a>	
<a href="#">GV-VML6-L-5</a>	Safety solenoid valve
<a href="#">VML35-5</a>	Safety solenoid valve
<a href="#">VML35.L-Rp 1 1/4", 230 VAC, 50/60Hz, 360 mbar</a>	Safety solenoid valve
<a href="#">VMR4-5, PR 1 1/2"</a>	Safety solenoid valve
<a href="#">VMR35-5, PR 1 1/4"</a>	Safety solenoid valve
<a href="#">VMR6-5</a>	Safety solenoid valve
<a href="#">VMR6 Rp2</a>	Magnetventil
<a href="#">GV-VMR0-5</a>	Magnetventil
<a href="#">VML8-2</a>	Safety solenoid valve
<a href="#">VMR4-5, Rp 1 1/2 (IP65)</a>	SOLENOID VALVE
<a href="#">VMR6-L-5</a>	Safety solenoid valve
<a href="#">Coil for VMR3-5</a>	Coil for safety solenoid valve
<a href="#">EVRM-6NA1</a>	Safety solenoid valve
<a href="#">VMR 2-5 (Art.-Nr.: GV-VMR2-5)</a>	safety solenoid valve
<a href="#">VRA4-2.N, 200 mbar, RP 1 1/2"</a>	
<a href="#">VMR0-2, 200 mbar, RP 3/8", 24 VAC/DC</a>	Sicherheits Magnetventil
<a href="#">VMR1 OTN.C, 200 mbar, RP 1/2", 24 VAC/DC</a>	Sicherheits Magnetventil
<a href="#">VMR01 OTN-2.C, 200 mbar, RP 1/4", 24 VAC/DC</a>	Sicherheits Magnetventil
<a href="#">VMR9-3</a>	Safety solenoid valve
<a href="#">VMR95-3</a>	Safety solenoid valve
<a href="#">VMR2-2.C</a>	Safety solenoid valve
<a href="#">VMR1-5 (220V)</a>	Electric valve
<a href="#">VMR1P</a>	Electricvalve
<a href="#">VML2-5 - Rp 3/4</a>	Control valves
<a href="#">VML2-5</a>	Safety solenoid valve
<a href="#">VML2-2</a>	Safety solenoid valve
<a href="#">VML3-5</a>	Safety solenoid valve
<a href="#">GV-VMR3-5.BL</a>	Valve
<a href="#">Ersatzspule für Sicherheits Magnetventil VMR4-3 ( ETGV-MS-35/6R)</a>	

Product	Description
<a href="#">Dichtungssatz für Sicherheits Magnetventil VMR4-3</a>	
<a href="#">LDM101A.X</a>	leak detector
<a href="#">VMR4-3 (GV-VMR4-L)</a>	safety solenoid valve
<a href="#">GV-VMR3-5</a>	Safety solenoid valve
<a href="#">VMR35-2</a>	safety solenoid valve
<a href="#">VML6-2.B</a>	safety valve
<a href="#">GV-VMR2-60</a>	Safety solenoid valve
<a href="#">VMR3-5 Rp1</a>	
<a href="#">VMR1-5 Rp1</a>	
<a href="#">GV-VML3-60</a>	Safety solenoid valve
<a href="#">LMV41.MC</a>	Linear control valve
<a href="#">ETGV-MS-SR4</a>	spare spool
<a href="#">VMR2-5</a>	safety solenoid valve
<a href="#">ETGV-MS-35/6-ALL for VML35/VMR35</a>	coil
<a href="#">VML 1-2</a>	Safety solenoid valve
<a href="#">GV-VMR6-L-5</a>	Safety solenoid valve
<a href="#">VMR6-2</a>	electric gas solenoid valve
<a href="#">Coil for VMR3-5</a>	
<a href="#">VMR6-2 2"</a>	
<a href="#">VMR0-2</a>	Safety and control valve for air and gas
<a href="#">VMR7-2</a>	solenoid valve
<a href="#">GV-VMR6-L-60</a>	electrogas valve
<a href="#">Coil for VMR 6-60</a>	Safety solenoid valve coil
<a href="#">GV-EVRM-6NC912C</a>	valve
<a href="#">ETGV-MS-35/6-ALL</a>	Spare spool
<a href="#">VMR12OTN</a>	Safety and Control Valve
<a href="#">VML7-2</a>	Solenoid Valve
<a href="#">VML3-5(230VAC)</a>	
<a href="#">VML3-5 (110 V AC)</a>	Electrogas valve
<a href="#">VMR4-5 Rp 1 1/2</a>	electrogas safety and control valves
<a href="#">VMR4-5</a>	Solenoid Coil
<a href="#">VMR6-2 RP2</a>	electrogas safety and control valves
<a href="#">GV-VMR9</a>	Natural Gas Magnetic Valve
<a href="#">GV-VMH9</a>	valve
<a href="#">VMR1-5</a>	Safety solenoid valve
<a href="#">BOV2025AV</a>	magnetic coil
<a href="#">ETGV-MS-35/6-ALL (500 mbar)</a>	Spare spool
<a href="#">replacement coil for safety solenoid valve EVRMNC9A to EVRMNC912A</a>	replacement coil
<a href="#">MA-SR8</a>	magnetic drive for butterfly valves type SR8
<a href="#">DK-VF8</a>	butterfly valve
<a href="#">AK-SET-S</a>	Set S for connecting VF6 to SR4N
<a href="#">VMR1-2</a>	Electric gas valve
<a href="#">GF-FG16A</a>	Gas Filter

Product	Description
<a href="#">VMR8-60</a>	safety solenoid valve
<a href="#">GV-VMR4-L-60</a>	electrogas valve
<a href="#">GV-VMR1-60</a>	electrogas valve
<a href="#">ETGV-MS-OTN</a>	spare spool
<a href="#">FGS3-6.A</a>	Gas Filter
<a href="#">LMV3.MC</a>	regulating valve
<a href="#">DK-VF93</a>	Throttle valve
<a href="#">AK-SET-M</a>	set
<a href="#">VMR02OTN</a>	solenoid valve
<a href="#">VMR1-5 Rp1/2</a>	
<a href="#">VRA7-2</a>	coil
<a href="#">ETGV-MS-0/1-200</a>	Spare spool (without damper)
<a href="#">VMR4-60.T1</a>	
<a href="#">VMR1-2 RP 1/2"</a>	electrical connection with plug
<a href="#">VML6-5</a>	Safety solenoid valve
<a href="#">VMR7-3</a>	valve
<a href="#">VMM40-2AS00</a>	valve
<a href="#">VML7-3</a>	valve
<a href="#">LDM4-00A62</a>	Tightness Control Device
<a href="#">MZ3.6</a>	servomotor
<a href="#">ZGV-PT-1K</a>	potentiometer
<a href="#">ETGV-MS-7/8</a>	spare spool
<a href="#">GF-FG66A</a>	filters
<a href="#">FG8-6.A</a>	gas filter
<a href="#">GV-VMR35-L-5</a>	Safety solenoid valve
<a href="#">ST4</a>	solenoid valve
<a href="#">ETGV-MS-0/1-500</a>	Spare spool
<a href="#">ETGV-MS-35/6-ALL (VMR35-5 - VMR6-5)</a>	Spare spool
<a href="#">DN65 (EVRM-6NA7)</a>	spare spool
<a href="#">DN 80 (EVRM-6NA8)</a>	spare spool
<a href="#">DN125 (EVRM-NA93)</a>	spare spool
<a href="#">MZ3</a>	servomotor
<a href="#">ETGV-MS-35/6-200</a>	safety solenoid valve coil
<a href="#">EVRM-NC98</a>	safety solenoid valve
<a href="#">1930.1313</a>	spool
<a href="#">VMR6-5F.J</a>	safety solenoid valve
<a href="#">ETGV-MS-2/3-110V</a>	spare spool
<a href="#">VMR4-L-2.J</a>	safety solenoid valve
<a href="#">VML4-L-2.J</a>	safety solenoid valve
<a href="#">DK-VF6</a>	electric gas butterfly valve
<a href="#">MA-SR4</a>	magnetic drive
<a href="#">VML4-5</a>	SOLENOID VALVE
<a href="#">VMR4-5-</a>	

Product	Description
<a href="#">VML3-2</a>	valve
<a href="#">GV-VMR3-60</a>	safety solenoid valve
<a href="#">EVRM-NC7A</a>	valve
<a href="#">VMR1-5N.I</a>	safety solenoid valve
<a href="#">VMR2-2</a>	Valve
<a href="#">VMM25-5BF10</a>	Multiple safety solenoid valve
<a href="#">FG3-6N.A</a>	Gas Filter
<a href="#">VMH 93.K</a>	Safety shut-off valve
<a href="#">ETGV-MS-35/6-ALL-NL</a>	spare spool
<a href="#">ETGV-SC3PSL</a>	transparent lid
<a href="#">MZ5</a>	Analog controller
<a href="#">BOGRC850220</a>	spool
<a href="#">ETGV-MS-0/1-200-L</a>	
<a href="#">1930.1112</a>	
<a href="#">VMR9-2</a>	Gas valve coil
<a href="#">ETGV-MS-2/3-500</a>	safety solenoid valve coil
<a href="#">ETGV-AMM1</a>	Brake for VML2-5
<a href="#">DR-RAG2</a>	Ratio controller
<a href="#">VML2-5.B</a>	safety solenoid valve
<a href="#">VMH9</a>	Safety shut-off valve for gas
<a href="#">GV-EVRM-6NC4A</a>	safety solenoid valve
<a href="#">GF-FG66</a>	Elektrogas Gasfilter
<a href="#">ETGF-FSET4-6</a>	
<a href="#">VF6R.SR4N.T1.A.PR</a>	
<a href="#">DK-VF6R</a>	throttle valve
<a href="#">VMM20-5.AS10</a>	treatment gas safety valves
<a href="#">VMR7-3 110V</a>	spare spool
<a href="#">VMR4-60</a>	Safety solenoid valve
<a href="#">MA-SR4N</a>	magnetic drive
<a href="#">MA-SR8.B</a>	magnetic drive
<a href="#">Type VF8 (DK-VF8)</a>	throttle valve
<a href="#">SR4.B</a>	magnetic drive
<a href="#">GV-EVRM-NC35A</a>	safety solenoid valve
<a href="#">VML3-5 Rp1" / 110VAC-50/60Hz</a>	safety solenoid valve
<a href="#">GV-VML6-L-60</a>	safety solenoid valve
<a href="#">DR-RAG3 (RAG3)</a>	Gas/air ratio controller
<a href="#">DK-VFT6 R</a>	throttle valve
<a href="#">NV6</a>	Needle valve for flow control
<a href="#">AK-Set-L</a>	Connection set set L
<a href="#">LD300.A</a>	Elektrogas leak detector (leak test) for gas roads
<a href="#">FG35-6.A</a>	gas filter
<a href="#">VMR35-60</a>	safety solenoid valve
<a href="#">VML35-60</a>	safety solenoid valve

Product	Description
<a href="#">MK-LD13-BM</a>	Bolt mounting kit (for LD3)
<a href="#">VML6-60</a>	safety solenoid valve
<a href="#">PSG901.63</a>	gas pressure switch
<a href="#">FG95-6.NA, 6 bar, DN 150</a>	
<a href="#">ETGV-MS-932/952-110</a>	coil
<a href="#">VMR4-5.J</a>	safety solenoid valve
<a href="#">GV-VML2-5</a>	safety solenoid valve
<a href="#">LDM2</a>	TIGHTNESS CHECK
<a href="#">GV-VMR6-L-5:B</a>	safety solenoid valve
<a href="#">FG7-2.A</a>	gas filter
<a href="#">PSG901.61</a>	gas pressure switch
<a href="#">PSG901.62</a>	gas pressure switch
<a href="#">LDM4-00 A 63</a>	tightness control device
<a href="#">VML8-2.J</a>	safety solenoid valve
<a href="#">GV-VML7</a>	safety solenoid valve
<a href="#">ETGF-FSET7-8</a>	Filter set with O-ring for gas filter
<a href="#">VMR9-3 DN100 (GV-VMR9)</a>	safety solenoid valve
<a href="#">wear parts set for VMR9-3 DN100 (PCS9)</a>	microswitch
<a href="#">VMR3-2 RP1</a>	electrical connection with plug
<a href="#">VMR2-2 RP 3/4</a>	electrical connection with plug
<a href="#">PCS9</a>	Microswitch for feedback on the closing position
<a href="#">VML7-3 DN 65</a>	solenoid valve
<a href="#">CFK2P.A.A</a>	Burner control
<a href="#">UV4 SH</a>	high performance UV flame sensor
<a href="#">Qbeam</a>	USB device
<a href="#">DR-RAG4N2</a>	Gas/air ratio regulator
<a href="#">VMR 3-2.L</a>	safety solenoid valve
<a href="#">coil for VMR02OTN</a>	coil for VMR02OTN valve
<a href="#">VFT3</a>	throttle valve for gas
<a href="#">VFT3N</a>	
<a href="#">VML6-5E</a>	Valve
<a href="#">ETGV-MS-35/6-24V (coil for VMR 4-5)</a>	VMR 4-5 solenoid valve coil
<a href="#">VMR9-3.HF</a>	
<a href="#">ETGV-MS-35/6-24V</a>	spool
<a href="#">VFH9</a>	
<a href="#">MZ310.B-P1</a>	Servo motor with potentiometer for ladle heaters
<a href="#">VRM6-60</a>	Valve
<a href="#">VMM802AS00</a>	valve