



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

# Hokuyo

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

## BRAND'S PRODUCTS

Product	Description
<a href="#">BWF-11B</a>	
<a href="#">DMS-GA2-V</a>	Data Transfer Setup
<a href="#">DMS-HA1-P</a>	
<a href="#">UST-20LX</a>	
<a href="#">BWF-11A</a>	Data Transmission Device
<a href="#">DMH-HB1</a>	Optical data transmission device
<a href="#">DMS-GA1-V</a>	Data Transmission Device
<a href="#">DMS-GB1-V</a>	sensor
<a href="#">DMS-GB2-V</a>	Optical data transmission device
<a href="#">DMS-HB1-Z05</a>	
<a href="#">DMS-HB1-Z06</a>	
<a href="#">DMS-HB1-Z09</a>	Transducer
<a href="#">DMJ-GB1</a>	sensor head
<a href="#">DMJ-HB1</a>	
<a href="#">PH-DX-R-21</a>	dedicated sensor
<a href="#">UTM-30LX</a>	
<a href="#">AC-LA44-AC100V</a>	Electromagnetic counter
<a href="#">AC-LA44-AC200V</a>	Electromagnetic counter
<a href="#">AC-LA44-DC24V</a>	Electromagnetic counter
<a href="#">AC-LA64-AC100V</a>	Electromagnetic counter
<a href="#">AC-LA64-AC200V</a>	Electromagnetic counter
<a href="#">AC-LA64-DC24V</a>	Electromagnetic counter
<a href="#">AC-NHB4-AC100V</a>	Electromagnetic counter
<a href="#">AC-NHB6-AC100V</a>	Electromagnetic counter
<a href="#">AC-NHB6-AC200V</a>	Electromagnetic counter
<a href="#">AC-NHB6-DC24V</a>	Electromagnetic counter
<a href="#">AC-NHBA4-AC100V</a>	Electromagnetic counter
<a href="#">AC-NHBA4-AC200V</a>	Electromagnetic counter
<a href="#">AC-NHBA4-DC24V</a>	Electromagnetic counter
<a href="#">AC-NHBA6-AC100V</a>	Electromagnetic counter
<a href="#">AC-NHBA6-AC200V</a>	Electromagnetic counter
<a href="#">AC-NHBA6-DC24V</a>	Electromagnetic counter
<a href="#">AC-NKB5-AC100V</a>	Electromagnetic counter
<a href="#">AC-NKB5-AC200V</a>	Electromagnetic counter
<a href="#">AC-NKB5-DC24V</a>	Electromagnetic counter

Product	Description
<a href="#">AC-NKBA4-DC24V</a>	Electromagnetic counter
<a href="#">AC-NKBA5-AC100V</a>	Electromagnetic counter
<a href="#">AC-NKBA5-AC200V</a>	Electromagnetic counter
<a href="#">AC-NKBA5-DC24V</a>	Electromagnetic counter
<a href="#">AC-NSAA-AC100V</a>	Electromagnetic counter
<a href="#">AC-NSAA-AC200V</a>	Electromagnetic counter
<a href="#">AC-NSAA-DC24V</a>	Electromagnetic counter
<a href="#">AC-NSBA-AC200V</a>	counter
<a href="#">AC-NSBA-DC24V</a>	Electromagnetic counter
<a href="#">AC-NSB-DC24V</a>	Electromagnetic counter
<a href="#">DC-JA7-AW</a>	Counter
<a href="#">DC-JA7-DW</a>	Counter
<a href="#">DC-JA7-V</a>	Counter
<a href="#">DC-JM4-AW</a>	Counter
<a href="#">DC-JM4-AWA</a>	Counter
<a href="#">DC-JM4-DW</a>	Counter
<a href="#">DC-JM4-DWA</a>	Counter
<a href="#">DC-JM6-AW</a>	Counter
<a href="#">DC-JM6-AWA</a>	Counter
<a href="#">DC-JM6-DW</a>	Counter
<a href="#">DC-JM6-DWA</a>	Counter
<a href="#">DC-VA4-XN</a>	Counter
<a href="#">DC-VA6-XN</a>	Counter
<a href="#">DC-JB6-AW</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JB6-AWA-AC100-240V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JB6-AYA-AC100-240V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JB6-DW</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JB6-DWA-DC24V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JB6-DY</a>	Electronic counter
<a href="#">DC-JB6-DYA-DC24V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-AW</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-AWA-AC100-240V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-AY</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-AYA-AC100-240V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-DW</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-DWA-DC24V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-DY</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-JC6-DYA-DC24V</a>	DIN48 electronic counter DC-JB / JC Series
<a href="#">DC-MA6-D</a>	DIN size electronic counter DC-M Series
<a href="#">DC-MA6-E</a>	DIN size electronic counter DC-M Series
<a href="#">DC-MB6-D</a>	DIN size electronic counter DC-M Series
<a href="#">DC-MB6-E</a>	DIN size electronic counter DC-M Series
<a href="#">DC-MC6-E</a>	DIN size electronic counter DC-M Series

Product	Description
<a href="#">PLX-105W</a>	Free power-shaped photoelectric sensor PLX
<a href="#">PLX-305W</a>	Free power-shaped photoelectric sensor PLX
<a href="#">PLX-403W</a>	Free power-shaped photoelectric sensor PLX
<a href="#">PLX-701L</a>	Free power-shaped photoelectric sensor PLX
<a href="#">PLX-701R</a>	Free power-shaped photoelectric sensor PLX
<a href="#">EWF-11A-02</a>	
<a href="#">EWF-11B-02</a>	
<a href="#">DMS-HA1-V</a>	Data Transmission Device
<a href="#">AC-NHBA4</a>	
<a href="#">BNC-HB1</a>	Reading head
<a href="#">EPK-BNC1</a>	Power box
<a href="#">AC-NKB5</a>	auto counter
<a href="#">BNC-HB1-S</a>	Data transmission set
<a href="#">S-20 H</a>	Photoelectric Sensor Switch
<a href="#">PEX334C</a>	Amplifier built-in sensor
<a href="#">FHM-311-2</a>	
<a href="#">PH-1U1</a>	PHOTO MASTER CONTROLLER
<a href="#">AC-NKBA4 110VAC</a>	Auto counter
<a href="#">UST-05LN</a>	scanning laser
<a href="#">PDL-120S</a>	LASER SENSOR
<a href="#">DMG-GB1-Z07</a>	Data transmission device
<a href="#">DMS-HF1A</a>	Sensor
<a href="#">PNX-705R</a>	
<a href="#">DMS-HF1B-02</a>	Quick charging station optical sensor
<a href="#">AC- NKB4</a>	counter
<a href="#">PRV-10C</a>	Detector, hot metal
<a href="#">DMS-GB1-Z99</a>	
<a href="#">BWF-3EA-CE</a>	
<a href="#">BWF-31A</a>	
<a href="#">BWF-31B</a>	
<a href="#">UBG-05LN</a>	Scanning Laser Obstacle Detection Sensor
<a href="#">WS-35H</a>	Water Cooled Hot Metal Detector
<a href="#">SP-R-13-501-01</a>	Safety Laser Scanner
<a href="#">PR-1T1</a>	
<a href="#">PNX-705L</a>	
<a href="#">UAM-05LP-T301</a>	Safety Laser Scanner
<a href="#">AC- ZA2X5</a>	
<a href="#">FH-411</a>	
<a href="#">DMH-GC1</a>	
<a href="#">BWF-21B-CE</a>	
<a href="#">DMJ-HB1-Z01</a>	Sensor
<a href="#">DMJ-CN4-Z01</a>	Sub-D adapter
<a href="#">DMS-HA1-E</a>	

Product	Description
<a href="#">DMS-HB1-P</a>	
<a href="#">DMH-HC1</a>	
<a href="#">UAM-05LP-T301C</a>	
<a href="#">UAM-W002</a>	Optical Window Replacement
<a href="#">PH-DX-R-72B</a>	
<a href="#">PEY-303C</a>	
<a href="#">BWF-21A-CE</a>	
<a href="#">BRC-G2AR</a>	
<a href="#">UST-05LX</a>	Scanning Laser Range Finder Sensor
<a href="#">URM-40LC-EW</a>	Scanning Laser Rangefinder
<a href="#">URM-C005 (UZ00112)</a>	
<a href="#">URM-ENET003 (UZ00113)</a>	
<a href="#">UST-10LX-H01</a>	
<a href="#">PBS-03JN (DC24V)</a>	
<a href="#">DMM-GC1</a>	
<a href="#">AC-NEA4</a>	
<a href="#">DMS-HB2-E70</a>	
<a href="#">DMG-HB1</a>	
<a href="#">AC-NEA6</a>	
<a href="#">BRS-G2CR-Z99</a>	
<a href="#">UST-10LX</a>	
<a href="#">DMS-GB1- P</a>	Data Transmission Device
<a href="#">DMS-HAS1-P</a>	
<a href="#">TES-113</a>	
<a href="#">PBS-03JN-V01</a>	
<a href="#">DMJ-HB1-Z50</a>	
<a href="#">DMJ-GB1-Z01</a>	
<a href="#">UST-05LNP</a>	DOMAIN BROWSER
<a href="#">BWF-11B-CE</a>	Optical data transmission device
<a href="#">WZ00043</a>	SENSOR
<a href="#">DMS-GB2-P01</a>	Data light barrier
<a href="#">DMS-GA1-P</a>	Data transmission device
<a href="#">FBX-25JC</a>	
<a href="#">FC-51C</a>	
<a href="#">EWF-1EA-N</a>	
<a href="#">EWF-1EB-N</a>	
<a href="#">UAM-BK05</a>	cover protector
<a href="#">UAM-MUSB</a>	
<a href="#">DMS-GB2-E70</a>	Optical detector
<a href="#">UST-30LX</a>	Compact Outdoor LiDAR Scanner
<a href="#">DMS-HB1-V</a>	Data transmission device
<a href="#">DMS-GB2-P</a>	
<a href="#">DMS-HA2-P</a>	optical sensor data transfer

Product	Description
<a href="#">DMS-HF1A-02</a>	
<a href="#">UST-10LX-H02</a>	
<a href="#">FH-415</a>	UNIT LASER FIBER-FIBER
<a href="#">UAM-05LP-OC</a>	
<a href="#">LAV-10P</a>	
<a href="#">EWF-0EA-N</a>	
<a href="#">EWF-0EB-N</a>	
<a href="#">UAM-BK04</a>	Back mounting bracket
<a href="#">AD SR1</a>	safety relays
<a href="#">FHM-201-14K</a>	
<a href="#">WZ00068</a>	
<a href="#">DMS-GB1-Z98</a>	
<a href="#">BWF-21B (WBWF 018) H103L</a>	Optical Data Transmission Device
<a href="#">DMS-HF1B-12</a>	optical sensor