



ENAPART



93 S Railroad Avenue Unit C
Bergenfield NJ 07621 USA
www.enapart.com
sales@enapart.com



Via del Canneto 35,
Borgosatollo, Brescia - Italia
www.enapart.it
vendite@enapart.it



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu
My Newwork No:3/15 Ataşehir / İstanbul
www.enapart.net
satis@enapart.net



PRIVADA 10 B SUR #3908 COL.
ANZUREZ, C.P. 72530, PUEBLA, PUE
www.enapart.com.mx
sales@enapart.com.mx



Friedrich-Ebert-Anlage 36, 60325
Frankfurt am Main, Germany
www.enapart.de
anfrage@enapart.de



4 boulevard Carnot, 95400
villiers-le-bel, Paris, France
www.enapart.fr
sales@enapart.fr



65049, ОДЕСА, ВУЛИЦЯ ІВАНА
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3
www.enapart.com.ua
sales@enapart.com.ua



MUNICIPIUL BUCUREȘTI, SECTOR 3,
B-DUL BASARABIA, NR.250, CORP P+5
www.enapart.ro
sales@enapart.ro



〒584-0023 大阪府富田林市若松町
東2丁目2番16号
www.enapart.co.jp
sales@enapart.co.jp



PLAZA NUESTRA SEÑORA DE LAS
NIEVES 12 ,LOCAL ,50012,ZARAGOZA
www.enapart.es
ventas@enapart.es



Складова база „Онгъл“, Склад А2, п.к.
4006, гр. Пловдив, България
www.enapart.bg
sales@enapart.bg



3 Austin Mews, High Street, Hemel
Hempstead, HP1 3AF , United Kingdom
www.enapart.co.uk
sales@enapart.co.uk

Wenglor

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

BRAND'S PRODUCTS

| Product | Description |
|-------------------------------|--|
| 051-101-103 | Glass Fiber Optic Cable |
| 111-255-202 | Glass Fiber Optic cable, Reflex mode |
| 113-232-102 | Glass Fiber Optic Cable Through Beam Mode |
| 113-232-304 | Glass Fiber Optic Cable |
| 113-254-104 | Glass Fiber Optic Cable |
| 163-138-103 | Glass Fiber Optic Cable Stat. Warennummer: 90011090 Net weight: 0.200 KG |
| 301-351-108 | Glass Fiber-Optic Cable |
| 363-272-120 | Glass fiber optic curtain for sensors for fiber optic cables |
| B50M001 | Smart Camera |
| BG2SG2V1-2M | Connection Cable |
| CP08MHT80 | Laser Distance Sensor |
| CP24MHT80 | Laser Distance Sensor |
| CP25QXVT80 | Laser Distance Sensor |
| CP35MHT80 | Laser Distance Sensor |
| CP70QXVT80 | Laser Distance Sensor |
| EO95VD3N | Through-Beam Sensor |
| ED98PC3 24VDC | Photoelectric Switch |
| EK96VB8 | Einweglichtschranke |
| EM98PA2 | Through-Beam Sensor |
| EO98VB3 | Reciprocal Sensor |
| EO98VB-U | Screening Grid Retainer |
| FFXP001 | Pressure Sensor |
| GM04VC2 | Gloss Sensor |
| HD09MG-P24 | Reflex Sensor |
| HD11PA3 | Reflex Sensor |
| HD11PCV3 | Reflex Sensor |
| HD12PCT3S745 | Reflex taster |
| HK12PB8 | Reflex taster mit Hintergrundausblendung |
| HK12PCT7 | |
| HK12PD8 | |
| HM24NA | reflex Tester |
| HM24PA2 | Reflex Sensor |
| HN22PA3 | Reflex Sensor |
| HN70PA3 | REFLEX SENSORS PNP 200 mA DETECTION RANGE : 700 mm. |
| HO08PA3 | Reflex Sensor |

| Product | Description |
|-------------------------------|---|
| HT77PA3 | Reflex Sensor |
| HW11PA3 | Reflex Sensor |
| IB040BM60VB3 | Inductive Sensor |
| IB060NM37VB | Inductive sensor |
| IB060NM61VB3 | Inductive Sensor |
| IM020BE35VB8 | Inductive Proximity Switch |
| IM020BM37VD | Inductive sensor |
| ISQ150BK00A3 | Inductive Sensor |
| IW080BM55VA | Inductive sensor |
| IW080BM65VA3 | Inductive Sensor |
| K1R87PCT2 | Retro-Reflex Sensor |
| KN55PA3 | Reflex Sensor Stat.Warennummer: 85365019 Net weight: 0.079 KG |
| KN88PA3 | sensor |
| KR87PCT2 | Retro-reflex sensor |
| LD86PA3 | Retro-Reflex Sensor |
| LD86PCT3 | Retro-Reflex Sensor |
| LD86PCV3 | Retro-Reflex Sensor |
| LK89NA7 | Reflex Sensor |
| LK89ND8 | Reflex Photoelectric Switch |
| LK89PA | Reflex Sensor |
| LK89PA7 | Retro-Reflex Sensor |
| LK89PD8 | Photo sensor |
| LN40PA3 | Spiegelreflexschranke |
| LN89PA3 | Reflex Sensor |
| LW86PA3 | Retro-Reflex Sensor |
| LW86PC3 | Retro-Reflex Sensor |
| LW86PCV3 | Retro-Reflex Sensor |
| OCPS885 | High Performance Distance Sensor |
| ODX202P0007 | Fiber-Optic Cable Sensor |
| OEEI501U0135 | Light Curtain |
| OEWK803A0091 | Through-Beam Sensor |
| OHN252B0003 | Reflex Sensor with Background Suppression Wenglor |
| OPT164 | Retro-Reflex Sensor |
| OPT89 | Reflection sensor |
| OSWK803Z0091 | Through-Beam Sensor |
| OTDK502A0002 | Energetic reflex sensor |
| OY1P303P0189 | Laser Distance Sensor |
| OY2TA403AT235 | Laser Distance Sensor |
| RE6210BM | Reflector |
| RE9538BA | Reflector |
| RO88PB3 | Retro-Reflex Sensor |
| S23-10MPUR | Connection Line |
| S23-2MPUR | Connection Line |

| Product | Description |
|-------------------------------|--|
| S27-2M | Connection Line |
| S27-5MPUR | connection technology |
| S80-2M | Connection Line |
| S80-5M | Connection Line |
| S88W-10MPUR | Connection Line |
| SG2-30IE090C1 | Safety light grid PL d |
| SG2-30IE120C1 | Safety Light Curtain PL d Hand Protection Receiver Protection Zone Height 1230mm |
| SG2-30IS090C1 | Safety light grid PL d |
| SG2-30IS120C1 | Safety Light Curtain PL d Hand Protection Emitter Protection Zone Height 1230mm |
| SG4-00VA000R2 | Safety Relay |
| SK968 | Einweg-Lichtschranke |
| 4-008-61-1000 | FIBER OPTIC CABLE |
| SLK1008 | Glasfaserlichtleitkabel |
| SO98-U | Through-beam sensor |
| TC55PA3 | Reflex Sensor |
| UC44PC3S421 | fiber optic cable sensor |
| UC55PCV3 | Fiber-Optic Cable Sensor |
| UF88PA3 | Fiber-Optic Cable Sensor |
| UF66VCF3 | Fiber-Optic Cable Sensor |
| UF87PA3 | Fiber-Optic Cable Sensor |
| UF88VCF3 | Fiber-Optic Cable Sensor |
| UM55PCV2 | Fiber-Optic Cable Sensor |
| UMD123U035 | Distance Sensor |
| WKS12AL | Mounting System |
| WM03NCT2 | Print Mark Reader |
| WM03PCT2 | Print Mark Reader |
| WP02PAT80 | Print Mark Reader |
| WP04NAT80 | Print Mark Reader |
| WPS12AL | Mounting System |
| XK89PA7 | Retro-reflex sensor |
| XM98NDH2 | Retro-Reflex Sensor |
| XM98PAH2 | Retro-Reflex Sensor |
| XM98PDVH2 | Retro-Reflex Sensor |
| XN96 VDH3 | Reflex Sensor |
| XN96PA3 | SLR barrier |
| XR96PCT2 | Retro-Reflex Sensor |
| XW100PA3 | Retro-Reflex Sensor |
| Y1TA100MHT88 | Laser Distance Sensor |
| YH08PCT8 | Fork Sensor |
| YK12PA7 | Reflex Sensor |
| YM22PA2 | Reflex Sensor |
| YM22PBV2 | Reflex Sensor |
| YM22PCT2 | Reflex Sensor |

| Product | Description |
|------------------------------|--------------------------------------|
| YM24PAH2ANZ | Contrast Sensor |
| YO11PA3 | Reflex Sensor |
| YO99VD3 | Through-Beam Sensor |
| YP05PA3 | Laser Distance Sensor |
| YP09PA3 | Laser Distance Sensor |
| YP11VAH3ABF | Contrast Sensor |
| ZAS89R201 | Connection Line |
| ZD200PCVT3 | Through-Beam Sensor |
| ZD600PCT3 | Through-Beam Sensor |
| ZD600PCVT3 | Through-Beam Sensor |
| ZDCL001 | Connection Line |
| ZK1008 | Photoelectric barrier |
| ZK100VD8 | Photoelectric barrier |
| ZMBID1202 | Mounting System |
| ZRME01B01 | Reflector |
| ZW2003 | Through-Beam Sensor |
| ZW200PCT3 | Through-Beam Sensor |
| ZW6003 | Through-Beam Sensor |
| IH020BK50VB8 | PROXIMITY SWITCH, 1H020 |
| TK55PA7 | DIFFUSE REFLECTIVE SENSOR |
| IB040BM60VD3 | Induktiver Sensor |
| IX150BM80VA3 | INDUCTIVE PROXIMITY SWITCH |
| IW050BM81KB | sensor |
| ZD6003 | Through-Beam Sensor |
| FFXF001 | Flow Sensor |
| IW080BM50VA3 | PROXIMITY SENSOR –PNP-NC, 10-30 V DC |
| LK89PB8 | Reflex Sensor |
| IL008BE42VB8 | Inductive Sensor |
| TO22PB3 | Reflex Sensor |
| I1QH002 | Inductive Sensor |
| S29-5M | Connection Line |
| S80-10M | Connection Line |
| OLD104C0003 | Retro-Reflex Sensor |
| HT80PA3 | Reflex Sensor |
| IW050BM55VA | Inductive Sensor |
| TR55PCT2 | Reflex Sensor |
| K10 | Plastic Fiber-Optic Cable |
| OY1P303P0102 | Laser Distance Sensor |
| WNS12AL | Mounting System |
| WNS12VA | Mounting System |
| WR1S12AL | Mounting System |
| WR1S12VA | Mounting System |
| W18S12AL | Mounting System |

| Product | Description |
|-------------------------------|---------------------------|
| W18S12VA | Mounting System |
| Y1TA100MHV80 | Laser Distance Sensor |
| I08H003 | Inductive Sensor |
| IB040BM46VD8 | Inductive Sensor |
| OY1TA603P0003 | Laser Distance Sensor |
| 051-101-102 | Glass Fiber-Optic Cable |
| 051-101-201 | Glass Fiber-Optic Cable |
| 081-132-202 | Glass Fiber-Optic Cable |
| 081-154-202 | Glass Fiber-Optic Cable |
| 081-207-202 | Reflector |
| 081-254-202 | Reflector |
| 083-101-102 | Glass Fiber-Optic Cable |
| 083-101-202 | Glass Fiber-Optic Cable |
| 083-135-202 | Glass Fiber-Optic Cable |
| 083-235-102 | Sealing Ring |
| 111-106-201 | Glass Fiber-Optic Cable |
| 111-232-102 | Plastic Fiber-Optic Cable |
| 111-232-202 | Laser Alignment Tool |
| 113-154-202 | Glass Fiber-Optic Cable |
| 113-207-202 | LED indicator strip set |
| 113-232-202 | LED indicator strip set |
| 161-138-202 | Glass Fiber-Optic Cable |
| 161-156-202 | Glass Fiber-Optic Cable |
| 161-156-203 | Glass Fiber-Optic Cable |
| 161-256-202 | LED indicator strip set |
| 163-238-104 | Glass Fiber-Optic Cable |
| 163-238-204 | LED indicator strip set |
| 163-255-104 | Glass Fiber-Optic Cable |
| 163-255-204 | Glass Fiber-Optic Cable |
| 231-218-201 | Glass Fiber-Optic Cable |
| 231-237-102 | Glass Fiber-Optic Cable |
| 231-237-202 | Connection Box |
| 231-251-202 | Connection Box |
| 233-110-106 | Glass Fiber-Optic Cable |
| 233-221-104 | Glass Fiber-Optic Cable |
| 233-237-103 | Glass Fiber-Optic Cable |
| 301-239-104 | Connection Box |
| 301-251-102 | Glass Fiber-Optic Cable |
| 301-251-104 | Glass Fiber-Optic Cable |
| 303-239-108 | Connection Box |
| 303-251-108 | Connection Box |
| 303-274-104 | Connection Box |
| 363-271-104 | Connection Box |

| Product | Description |
|------------------------------|---------------------------------|
| 363-272-104 | Connection Box |
| 363-273-104 | Connection Socket |
| 403-270-104 | Glass Fiber-Optic Light Curtain |
| A1P05QAT80 | Connection Socket |
| A2P05QAT80 | Switch |
| A485-232 | Switch |
| AB-0003 | Connection Box |
| AB-0003-1 | Connection Box |
| AW02 | Analog Evaluation Unit |
| B50M002 | Smart Camera |
| B50M003 | Smart Camera |
| B50M004 | Smart Camera |
| B50M100 | Smart Camera |
| B50M101 | Smart Camera |
| B50M102 | Smart Camera |
| B50M103 | Smart Camera |
| B50R001 | OCR Reader |
| B50R002 | OCR Reader |
| B50R100 | OCR Reader |
| B50R101 | OCR Reader |
| B50S001 | Vision Sensor |
| B50S002 | Vision Sensor |
| B50S003 | Vision Sensor |
| B50S100 | Vision Sensor |
| B50S101 | Vision Sensor |
| B50S102 | Vision Sensor |
| BD9BD9V01-3M | Connection Cable |
| BEF-SET-01 | Mounting Set |
| BEF-SET-02 | Mounting Set |
| BEF-SET-03 | Mounting Set |
| BEF-SET-04 | Mounting Set |
| BEF-SET-05 | Mounting Clamp |
| BEF-SET-06 | Mounting Clamp |
| BEF-SET-07 | Mounting Set |
| BEF-SET-08 | Mounting Set |
| BEF-SET-09 | Mounting Set |
| BEF-SET-10 | Mounting Set |
| BEF-SET-11 | Mounting Set |
| BEF-SET-13 | Mounting Set |
| BEF-SET-14 | Mounting Set |
| BEF-SET-18 | Mounting Element |
| BEF-SET-19 | Mounting Set |
| BEF-SET-20 | Mounting Set |

| Product | Description |
|--------------------------------|----------------------|
| BEF-SET-21 | Mounting Set |
| BEF-SET-23 | Mounting Set |
| BEF-SET-24 | Mounting Set |
| BEF-SET-27 | Mounting Set |
| BEF-SET-28 | Mounting-Set 28 |
| BEF-SET-33 | Mounting Set |
| BEF-SET-34 | Mounting Set |
| BEF-SET-35 | Mounting Set |
| BEF-SET-36 | Mounting Bracket |
| BEF-SET-38 | Mounting Set |
| BEF-SET-39 | Mounting Set |
| BEF-SET-40 | Mounting Set |
| BEF-SET-41 | Mounting Set |
| BEF-SET-42 | Mounting Set |
| BEF-SET-43 | Mounting Set |
| BEF-SET-44 | Mounting Set |
| BG2BSW1-08M | Connection Cable |
| BG2SG2V3-2M | Connection Cable |
| BG7SG2V1-2M | Connection Cable |
| BG7SG7V1-2M | Connection Cable |
| BG7V1P-N-2M | PNP-NPN Converter |
| BG80-ME | Connection Socket |
| BG88SG88V2-2M | Connection Cable |
| BG8SG8V1-2M | Connection Cable |
| BG8SG8V1-5MPUR | Connection Cable |
| BG8V1P-N-2M | PNP-NPN Converter |
| BKS0C0A40 | Digital Camera |
| BKS0M0A40 | Digital Camera |
| BLN0H1R10 | Barcode Line Scanner |
| BLN0L1R10 | Barcode Line Scanner |
| BR40M1I10 | OCR Reader |
| BR40M1R10 | OCR Reader |
| BR40M1W10 | OCR Reader |
| BS1 | Mounting Clamp |
| BS2 | Mounting Clamp |
| BS3 | Mounting Clamp |
| BS4 | Mounting Clamp |
| BS5 | Mounting Clamp |
| BS6 | Mounting Clamp |
| BS7 | Mounting Clamp |
| BS8 | Mounting Clamp |
| BS9 | Mounting Clamp |
| BSD4NB | Mounting Clamp |

| Product | Description |
|-----------------------------|------------------------|
| BSD6-5NB | Mounting Clamp |
| BSM12B | Mounting Clamp |
| BSM12NB | Mounting Clamp |
| BSM18B | Mounting Clamp |
| BSM18NB | Mounting Clamp |
| BSM5NB | Mounting Clamp |
| BSM8NB | Mounting Clamp |
| BVC0A0A31 | Control Unit |
| BVZ2002 | wVision Windows |
| BW2SG2V1-2M | Connection Cable |
| BW7SG7V1-2M | Connection Cable |
| BW80-ME | Connection Socket |
| C50C001 | 1D/2D Code Scanner |
| C50C002 | 1D/2D Code Scanner |
| C50C003 | 1D/2D Code Scanner |
| C50C100 | 1D/2D Code Scanner |
| C50C101 | 1D/2D Code Scanner |
| C50C102 | 1D/2D Code Scanner |
| CSLH001 | 1D/2D Handheld Scanner |
| CSLH002 | 1D/2D Handheld Scanner |
| E1FL66VD | Through-Beam Sensor |
| E1L | Adjustment Key |
| E2L | Adjustment Key |
| EA250-P24 | Through-Beam Sensor |
| EB77VB7 | Through-Beam Sensor |
| EB77VD7 | Through-Beam Sensor |
| ED98PC3 | Through-Beam Sensor |
| ED98PCV3 | Through-Beam Sensor |
| EFBL001 | IO-Link Master |
| EK96VB | Through-Beam Sensor |
| EK96VD | Through-Beam Sensor |
| EK96VD8 | Mounting Set |
| EN200PA3 | Through-Beam Sensor |
| EN600PA3 | Through-Beam Sensor |
| EO95VB3N | Through-Beam Sensor |
| EO98VD3 | Through-Beam Sensor |
| EPGG001 | Fieldbus Gateway |
| EW98PC3 | Through-Beam Sensor |
| FFAF001 | Flow Sensor |
| FFAF002 | Flow Sensor |
| FFAF003 | Flow Sensor |
| FFAF004 | Flow Sensor |
| FFAF005 | Flow Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAF006 | Flow Sensor |
| FFAF007 | Flow Sensor |
| FFAF008 | Flow Sensor |
| FFAF009 | Flow Sensor |
| FFAF010 | Flow Sensor |
| FFAF022 | Flow Sensor |
| FFAF023 | Flow Sensor |
| FFAF024 | Flow Sensor |
| FFAF025 | Flow Sensor |
| FFAF026 | Flow Sensor |
| FFAF027 | Flow Sensor |
| FFAF028 | Flow Sensor |
| FFAF029 | Flow Sensor |
| FFAF030 | Flow Sensor |
| FFAF031 | Flow Sensor |
| FFAF032 | Flow Sensor |
| FFAF033 | Flow Sensor |
| FFAF034 | Flow Sensor |
| FFAF035 | Flow Sensor |
| FFAF036 | Flow Sensor |
| FFAF037 | Flow Sensor |
| FFAF038 | Flow Sensor |
| FFAF040 | Flow Sensor |
| FFAF041 | Flow Sensor |
| FFAF042 | Flow Sensor |
| FFAF043 | Flow Sensor |
| FFAF044 | Flow Sensor |
| FFAF045 | Flow Sensor |
| FFAF046 | Flow Sensor |
| FFAF047 | Flow Sensor |
| FFAF048 | Flow Sensor |
| FFAF049 | Flow Sensor |
| FFAF050 | Flow Sensor |
| FFAF051 | Flow Sensor |
| FFAF052 | Flow Sensor |
| FFAF085 | Flow Sensor |
| FFAF086 | Flow Sensor |
| FFAF087 | Flow Sensor |
| FFAF088 | Flow Sensor |
| FFAF089 | Flow Sensor |
| FFAF090 | Flow Sensor |
| FFAF091 | Flow Sensor |
| FFAF092 | Flow Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAF093 | Flow Sensor |
| FFAF094 | Flow Sensor |
| FFAF095 | Flow Sensor |
| FFAF096 | Flow Sensor |
| FFAF097 | Flow Sensor |
| FFAF098 | Flow Sensor |
| FFAF099 | Flow Sensor |
| FFAF100 | Flow Sensor |
| FFAF101 | Flow Sensor |
| FFAF102 | Flow Sensor |
| FFAF103 | Flow Sensor |
| FFAF104 | Flow Sensor |
| FFAF105 | Flow Sensor |
| FFAF106 | Flow Sensor |
| FFAF107 | Flow Sensor |
| FFAF108 | Flow Sensor |
| FFAF109 | Flow Sensor |
| FFAF110 | Flow Sensor |
| FFAF111 | Flow Sensor |
| FFAF112 | Flow Sensor |
| FFAF113 | Flow Sensor |
| FFAF114 | Flow Sensor |
| FFAF115 | Flow Sensor |
| FFAF116 | Flow Sensor |
| FFAF168 | Flow Sensor |
| FFAF169 | Flow Sensor |
| FFAF170 | Flow Sensor |
| FFAF171 | Flow Sensor |
| FFAF172 | Flow Sensor |
| FFAF173 | Flow Sensor |
| FFAF174 | Flow Sensor |
| FFAF175 | Flow Sensor |
| FFAF176 | Flow Sensor |
| FFAF177 | Flow Sensor |
| FFAF178 | Flow Sensor |
| FFAF179 | Flow Sensor |
| FFAF180 | Flow Sensor |
| FFAF181 | Flow Sensor |
| FFAF182 | Flow Sensor |
| FFAF183 | Flow Sensor |
| FFAF184 | Flow Sensor |
| FFAF185 | Flow Sensor |
| FFAF186 | Flow Sensor |

| Product | Description |
|-------------------------|----------------------|
| FFAF187 | Flow Sensor |
| FFAF188 | Flow Sensor |
| FFAF189 | Flow Sensor |
| FFAF190 | Flow Sensor |
| FFAF191 | Flow Sensor |
| FFAF192 | Flow Sensor |
| FFAF193 | Flow Sensor |
| FFAF205 | Flow Sensor |
| FFAF206 | Flow Sensor |
| FFAF207 | Flow Sensor |
| FFAF208 | Flow Sensor |
| FFAF209 | Flow Sensor |
| FFAF210 | Flow Sensor |
| FFAF211 | Flow Sensor |
| FFAP001 | Polarization Filter |
| FFAP002 | Pressure Sensor |
| FFAP003 | Pressure Sensor |
| FFAP004 | Pressure Sensor |
| FFAP005 | Pressure Sensor |
| FFAP006 | Pressure Sensor |
| FFAP007 | Pressure Sensor |
| FFAP008 | Pressure Sensor |
| FFAP009 | Pressure Sensor |
| FFAP010 | Pressure Sensor |
| FFAP011 | Pressure Sensor |
| FFAP012 | Pressure Sensor |
| FFAP013 | Pressure Sensor |
| FFAP014 | Pressure Sensor |
| FFAP015 | Pressure Sensor |
| FFAP016 | Pressure Sensor |
| FFAP017 | Pressure Sensor |
| FFAP018 | High-Resolution Lens |
| FFAP019 | Pressure Sensor |
| FFAP020 | High-Resolution Lens |
| FFAP021 | Pressure Sensor |
| FFAP022 | Pressure Sensor |
| FFAP023 | Pressure Sensor |
| FFAP024 | Pressure Sensor |
| FFAP025 | Pressure Sensor |
| FFAP026 | Pressure Sensor |
| FFAP027 | Pressure Sensor |
| FFAP028 | Pressure Sensor |
| FFAP029 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAP030 | Pressure Sensor |
| FFAP031 | Pressure Sensor |
| FFAP032 | Pressure Sensor |
| FFAP033 | Pressure Sensor |
| FFAP034 | Pressure Sensor |
| FFAP035 | Pressure Sensor |
| FFAP036 | Pressure Sensor |
| FFAP037 | Pressure Sensor |
| FFAP038 | Pressure Sensor |
| FFAP039 | Pressure Sensor |
| FFAP041 | Pressure Sensor |
| FFAP042 | Pressure Sensor |
| FFAP043 | Pressure Sensor |
| FFAP044 | Pressure Sensor |
| FFAP045 | Pressure Sensor |
| FFAP046 | Pressure Sensor |
| FFAP047 | Pressure Sensor |
| FFAP048 | Pressure Sensor |
| FFAP049 | Pressure Sensor |
| FFAP050 | Pressure Sensor |
| FFAP051 | Pressure Sensor |
| FFAP052 | Pressure Sensor |
| FFAP053 | Pressure Sensor |
| FFAP054 | Pressure Sensor |
| FFAP055 | Pressure Sensor |
| FFAP056 | Pressure Sensor |
| FFAP057 | Pressure Sensor |
| FFAP058 | Pressure Sensor |
| FFAP059 | Pressure Sensor |
| FFAP060 | Pressure Sensor |
| FFAP061 | Pressure Sensor |
| FFAP062 | Pressure Sensor |
| FFAP063 | Pressure Sensor |
| FFAP065 | Pressure Sensor |
| FFAP066 | Pressure Sensor |
| FFAP067 | Pressure Sensor |
| FFAP068 | Pressure Sensor |
| FFAP069 | Pressure Sensor |
| FFAP070 | Pressure Sensor |
| FFAP071 | Pressure Sensor |
| FFAP072 | Pressure Sensor |
| FFAP073 | Pressure Sensor |
| FFAP074 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAP075 | Pressure Sensor |
| FFAP076 | Pressure Sensor |
| FFAP077 | Pressure Sensor |
| FFAP078 | Pressure Sensor |
| FFAP079 | Pressure Sensor |
| FFAP080 | Pressure Sensor |
| FFAP081 | Pressure Sensor |
| FFAP082 | Pressure Sensor |
| FFAP083 | Pressure Sensor |
| FFAP084 | Pressure Sensor |
| FFAP085 | Pressure Sensor |
| FFAP086 | Pressure Sensor |
| FFAP087 | Pressure Sensor |
| FFAP088 | Pressure Sensor |
| FFAP089 | Pressure Sensor |
| FFAP090 | Pressure Sensor |
| FFAP091 | Pressure Sensor |
| FFAP092 | Pressure Sensor |
| FFAP093 | Pressure Sensor |
| FFAP094 | Pressure Sensor |
| FFAP095 | Pressure Sensor |
| FFAP096 | Pressure Sensor |
| FFAP097 | Pressure Sensor |
| FFAP098 | Pressure Sensor |
| FFAP099 | Pressure Sensor |
| FFAP100 | Pressure Sensor |
| FFAP101 | Pressure Sensor |
| FFAP102 | Pressure Sensor |
| FFAP103 | Pressure Sensor |
| FFAP104 | Pressure Sensor |
| FFAP105 | Pressure Sensor |
| FFAP106 | Pressure Sensor |
| FFAP107 | Pressure Sensor |
| FFAP108 | Pressure Sensor |
| FFAP109 | Pressure Sensor |
| FFAP110 | Pressure Sensor |
| FFAP111 | Pressure Sensor |
| FFAP112 | Pressure Sensor |
| FFAP113 | Pressure Sensor |
| FFAP114 | Pressure Sensor |
| FFAP115 | Pressure Sensor |
| FFAP116 | Pressure Sensor |
| FFAP117 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAP118 | Pressure Sensor |
| FFAP119 | Pressure Sensor |
| FFAP120 | Pressure Sensor |
| FFAP121 | Pressure Sensor |
| FFAP122 | Pressure Sensor |
| FFAP123 | Pressure Sensor |
| FFAP124 | Pressure Sensor |
| FFAP125 | Pressure Sensor |
| FFAP126 | Pressure Sensor |
| FFAP127 | Pressure Sensor |
| FFAP128 | Pressure Sensor |
| FFAP129 | Pressure Sensor |
| FFAP130 | Pressure Sensor |
| FFAP131 | Pressure Sensor |
| FFAP132 | Pressure Sensor |
| FFAP133 | Pressure Sensor |
| FFAP134 | Pressure Sensor |
| FFAP135 | Pressure Sensor |
| FFAP136 | Pressure Sensor |
| FFAP137 | Pressure Sensor |
| FFAP138 | Pressure Sensor |
| FFAP139 | Pressure Sensor |
| FFAP140 | Pressure Sensor |
| FFAP141 | Pressure Sensor |
| FFAP142 | Pressure Sensor |
| FFAP143 | Pressure Sensor |
| FFAP144 | Pressure Sensor |
| FFAP145 | Pressure Sensor |
| FFAP146 | Pressure Sensor |
| FFAP147 | Pressure Sensor |
| FFAP148 | Pressure Sensor |
| FFAP149 | Pressure Sensor |
| FFAP151 | Pressure Sensor |
| FFAP152 | Pressure Sensor |
| FFAP153 | Pressure Sensor |
| FFAP154 | Pressure Sensor |
| FFAP155 | Pressure Sensor |
| FFAP156 | Pressure Sensor |
| FFAP157 | Pressure Sensor |
| FFAP158 | Pressure Sensor |
| FFAP159 | Pressure Sensor |
| FFAP160 | Pressure Sensor |
| FFAP161 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAP162 | Pressure Sensor |
| FFAP163 | Pressure Sensor |
| FFAP164 | Pressure Sensor |
| FFAP165 | Pressure Sensor |
| FFAP166 | Pressure Sensor |
| FFAP167 | Pressure Sensor |
| FFAP168 | Pressure Sensor |
| FFAP169 | Pressure Sensor |
| FFAP170 | Pressure Sensor |
| FFAP171 | Pressure Sensor |
| FFAP172 | Pressure Sensor |
| FFAP173 | Pressure Sensor |
| FFAP175 | Pressure Sensor |
| FFAP176 | Pressure Sensor |
| FFAP177 | Pressure Sensor |
| FFAP178 | Pressure Sensor |
| FFAP179 | Pressure Sensor |
| FFAP180 | Pressure Sensor |
| FFAP181 | Pressure Sensor |
| FFAP182 | Pressure Sensor |
| FFAP183 | Pressure Sensor |
| FFAP184 | Pressure Sensor |
| FFAP185 | Pressure Sensor |
| FFAP186 | Pressure Sensor |
| FFAP187 | Pressure Sensor |
| FFAP188 | Pressure Sensor |
| FFAP189 | Pressure Sensor |
| FFAP190 | Pressure Sensor |
| FFAP191 | Pressure Sensor |
| FFAP192 | Pressure Sensor |
| FFAP193 | Pressure Sensor |
| FFAP194 | Pressure Sensor |
| FFAP195 | Pressure Sensor |
| FFAP196 | Pressure Sensor |
| FFAP197 | Pressure Sensor |
| FFAP198 | Pressure Sensor |
| FFAP199 | Pressure Sensor |
| FFAP200 | Pressure Sensor |
| FFAP201 | Pressure Sensor |
| FFAP202 | Pressure Sensor |
| FFAP203 | Pressure Sensor |
| FFAP204 | Pressure Sensor |
| FFAP205 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAP206 | Pressure Sensor |
| FFAP207 | Pressure Sensor |
| FFAP208 | Pressure Sensor |
| FFAP209 | Pressure Sensor |
| FFAP210 | Pressure Sensor |
| FFAP211 | Pressure Sensor |
| FFAP212 | Pressure Sensor |
| FFAP213 | Pressure Sensor |
| FFAP214 | Pressure Sensor |
| FFAP215 | Pressure Sensor |
| FFAP216 | Pressure Sensor |
| FFAP217 | Pressure Sensor |
| FFAP218 | Pressure Sensor |
| FFAP219 | Pressure Sensor |
| FFAP220 | Pressure Sensor |
| FFAP225 | Pressure Sensor |
| FFAP226 | Pressure Sensor |
| FFAP227 | Pressure Sensor |
| FFAP231 | Pressure Sensor |
| FFAP232 | Pressure Sensor |
| FFAP233 | Pressure Sensor |
| FFAP234 | Pressure Sensor |
| FFAP235 | Pressure Sensor |
| FFAP236 | Pressure Sensor |
| FFAP237 | Pressure Sensor |
| FFAP238 | Pressure Sensor |
| FFAP239 | Pressure Sensor |
| FFAP240 | Pressure Sensor |
| FFAP241 | Pressure Sensor |
| FFAP242 | Pressure Sensor |
| FFAP243 | Pressure Sensor |
| FFAP244 | Pressure Sensor |
| FFAP245 | Pressure Sensor |
| FFAP246 | Pressure Sensor |
| FFAP247 | Pressure Sensor |
| FFAP248 | Pressure Sensor |
| FFAP249 | Pressure Sensor |
| FFAP250 | Pressure Sensor |
| FFAP251 | Pressure Sensor |
| FFAP252 | Pressure Sensor |
| FFAP253 | Pressure Sensor |
| FFAP254 | Pressure Sensor |
| FFAP255 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAP256 | Pressure Sensor |
| FFAP257 | Pressure Sensor |
| FFAP258 | Pressure Sensor |
| FFAP259 | Pressure Sensor |
| FFAP260 | Pressure Sensor |
| FFAP261 | Pressure Sensor |
| FFAP262 | Pressure Sensor |
| FFAP263 | Pressure Sensor |
| FFAP264 | Pressure Sensor |
| FFAP265 | Pressure Sensor |
| FFAP266 | Pressure Sensor |
| FFAP267 | Pressure Sensor |
| FFAP268 | Pressure Sensor |
| FFAP269 | Pressure Sensor |
| FFAP270 | Pressure Sensor |
| FFAP271 | Pressure Sensor |
| FFAP272 | Pressure Sensor |
| FFAP273 | Pressure Sensor |
| FFAP274 | Pressure Sensor |
| FFAP275 | Pressure Sensor |
| FFAP276 | Pressure Sensor |
| FFAP277 | Pressure Sensor |
| FFAP278 | Pressure Sensor |
| FFAP279 | Pressure Sensor |
| FFAP280 | Pressure Sensor |
| FFAP282 | Pressure Sensor |
| FFAP283 | Pressure Sensor |
| FFAP284 | Pressure Sensor |
| FFAP285 | Pressure Sensor |
| FFAT001 | Temperature Sensor |
| FFAT002 | Temperature Sensor |
| FFAT003 | Temperature Sensor |
| FFAT004 | Temperature Sensor |
| FFAT005 | Temperature Sensor |
| FFAT006 | Temperature Sensor |
| FFAT007 | Temperature Sensor |
| FFAT008 | Temperature Sensor |
| FFAT009 | Temperature Sensor |
| FFAT010 | Temperature Sensor |
| FFAT011 | Temperature Sensor |
| FFAT012 | Temperature Sensor |
| FFAT013 | Temperature Sensor |
| FFAT014 | Temperature Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFAT015 | Temperature Sensor |
| FFAT016 | Temperature Sensor |
| FFAT017 | Temperature Sensor |
| FFAT018 | Temperature Sensor |
| FFAT019 | Temperature Sensor |
| FFAT020 | Temperature Sensor |
| FFAT021 | Temperature Sensor |
| FFAT022 | Temperature Sensor |
| FFAT023 | Temperature Sensor |
| FFAT024 | Temperature Sensor |
| FFAT025 | Temperature Sensor |
| FFAT026 | Temperature Sensor |
| FFAT027 | Temperature Sensor |
| FFAT028 | Temperature Sensor |
| FFAT029 | Temperature Sensor |
| FFAT030 | Temperature Sensor |
| FFAT031 | Temperature Sensor |
| FFAT032 | Temperature Sensor |
| FFAT033 | Temperature Sensor |
| FFAT034 | Temperature Sensor |
| FFAT035 | Temperature Sensor |
| FFAT036 | Temperature Sensor |
| FFAT037 | Temperature Sensor |
| FFAT038 | Temperature Sensor |
| FFAT039 | Temperature Sensor |
| FFAT040 | Temperature Sensor |
| FFAT041 | Temperature Sensor |
| FFAT042 | Temperature Sensor |
| FFAT043 | Temperature Sensor |
| FFAT044 | Temperature Sensor |
| FFAT045 | Temperature Sensor |
| FFAT046 | Temperature Sensor |
| FFMP001 | Pressure Sensor |
| FFMP002 | Pressure Sensor |
| FFMP003 | Pressure Sensor |
| FFMP004 | Pressure Sensor |
| FFMP005 | Pressure Sensor |
| FFMP006 | Pressure Sensor |
| FFMP007 | Pressure Sensor |
| FFMP008 | Pressure Sensor |
| FFMP009 | Pressure Sensor |
| FFMP010 | Pressure Sensor |
| FFMP011 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFMP012 | Pressure Sensor |
| FFMP013 | Pressure Sensor |
| FFMP014 | Pressure Sensor |
| FFMP015 | Pressure Sensor |
| FFMP016 | Pressure Sensor |
| FFMP017 | Pressure Sensor |
| FFMP018 | Pressure Sensor |
| FFMP019 | Pressure Sensor |
| FFMP020 | Pressure Sensor |
| FFMP021 | Pressure Sensor |
| FFMP022 | Pressure Sensor |
| FFMP023 | Pressure Sensor |
| FFMP024 | Pressure Sensor |
| FFMP025 | Pressure Sensor |
| FFMP026 | Pressure Sensor |
| FFMP027 | Pressure Sensor |
| FFMP028 | Pressure Sensor |
| FFMP029 | Pressure Sensor |
| FFMP030 | Pressure Sensor |
| FFMP031 | Pressure Sensor |
| FFMP032 | Pressure Sensor |
| FFMP033 | Pressure Sensor |
| FFMP034 | Pressure Sensor |
| FFMP035 | Pressure Sensor |
| FFMP036 | Pressure Sensor |
| FFMP037 | Pressure Sensor |
| FFMP038 | Pressure Sensor |
| FFMP039 | Pressure Sensor |
| FFMP040 | Pressure Sensor |
| FFMP041 | Pressure Sensor |
| FFMP042 | Pressure Sensor |
| FFMP043 | Pressure Sensor |
| FFMP044 | Pressure Sensor |
| FFMP045 | Pressure Sensor |
| FFMP046 | Pressure Sensor |
| FFMP047 | Pressure Sensor |
| FFMP048 | Pressure Sensor |
| FFMP049 | Pressure Sensor |
| FFMP050 | Pressure Sensor |
| FFMP051 | Pressure Sensor |
| FFMP052 | Pressure Sensor |
| FFMP053 | Pressure Sensor |
| FFMP054 | Pressure Sensor |

| Product | Description |
|-------------------------|-----------------|
| FFMP055 | Pressure Sensor |
| FFMP056 | Pressure Sensor |
| FFMP057 | Pressure Sensor |
| FFMP058 | Pressure Sensor |
| FFMP059 | Pressure Sensor |
| FFMP060 | Pressure Sensor |
| FFMP061 | Pressure Sensor |
| FFMP062 | Pressure Sensor |
| FFMP063 | Pressure Sensor |
| FFMP064 | Pressure Sensor |
| FFMP065 | Pressure Sensor |
| FFMP067 | Pressure Sensor |
| FFMP068 | Pressure Sensor |
| FFMP069 | Pressure Sensor |
| FFMP070 | Pressure Sensor |
| FFMP071 | Pressure Sensor |
| FFMP072 | Pressure Sensor |
| FFMP073 | Pressure Sensor |
| FFMP074 | Pressure Sensor |
| FFMP075 | Pressure Sensor |
| FFMP076 | Pressure Sensor |
| FFMP091 | Pressure Sensor |
| FFMP092 | Pressure Sensor |
| FFMP093 | Pressure Sensor |
| FFMP094 | Pressure Sensor |
| FFMP095 | Pressure Sensor |
| FFMP096 | Pressure Sensor |
| FFMP097 | Pressure Sensor |
| FFMP098 | Pressure Sensor |
| FFMP099 | Pressure Sensor |
| FFMP100 | Pressure Sensor |
| FFMP101 | Pressure Sensor |
| FFMP102 | Pressure Sensor |
| FFMP103 | Pressure Sensor |
| FFMP104 | Pressure Sensor |
| FFMP105 | Pressure Sensor |
| FFMP106 | Pressure Sensor |
| FFMP107 | Pressure Sensor |
| FFMP108 | Pressure Sensor |
| FFMP109 | Pressure Sensor |
| FFMP110 | Pressure Sensor |
| FFMP111 | Pressure Sensor |
| FFMP112 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFMP113 | Pressure Sensor |
| FFMP114 | Pressure Sensor |
| FFMP115 | Pressure Sensor |
| FFMP116 | Pressure Sensor |
| FFMP117 | Pressure Sensor |
| FFMP118 | Pressure Sensor |
| FFMP119 | Pressure Sensor |
| FFMP120 | Pressure Sensor |
| FFMP121 | Pressure Sensor |
| FFMP122 | Pressure Sensor |
| FFMP123 | Pressure Sensor |
| FFMP124 | Pressure Sensor |
| FFMP125 | Pressure Sensor |
| FFMP126 | Pressure Sensor |
| FFMP127 | Pressure Sensor |
| FFMP128 | Pressure Sensor |
| FFMP129 | Pressure Sensor |
| FFMP130 | Pressure Sensor |
| FFMP131 | Pressure Sensor |
| FFMP132 | Pressure Sensor |
| FFMP133 | Pressure Sensor |
| FFMP134 | Pressure Sensor |
| FFMP135 | Pressure Sensor |
| FFMP136 | Pressure Sensor |
| FFMP137 | Pressure Sensor |
| FFMP138 | Pressure Sensor |
| FFMP139 | Pressure Sensor |
| FFMP140 | Pressure Sensor |
| FFMP141 | Pressure Sensor |
| FFMP142 | Pressure Sensor |
| FFMP143 | Pressure Sensor |
| FFMP144 | Pressure Sensor |
| FFMP145 | Pressure Sensor |
| FFMP146 | Pressure Sensor |
| FFMP147 | Pressure Sensor |
| FFMP148 | Pressure Sensor |
| FFMP149 | Pressure Sensor |
| FFMP150 | Pressure Sensor |
| FFMP151 | Pressure Sensor |
| FFMP152 | Pressure Sensor |
| FFMP153 | Pressure Sensor |
| FFMP154 | Pressure Sensor |
| FFMP155 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFMP157 | Pressure Sensor |
| FFMP158 | Pressure Sensor |
| FFMP159 | Pressure Sensor |
| FFMP160 | Pressure Sensor |
| FFMP161 | Pressure Sensor |
| FFMP162 | Pressure Sensor |
| FFMP163 | Pressure Sensor |
| FFMP164 | Pressure Sensor |
| FFMP165 | Pressure Sensor |
| FFMP166 | Pressure Sensor |
| FFMP181 | Pressure Sensor |
| FFMP182 | Pressure Sensor |
| FFMP187 | Pressure Sensor |
| FFMP188 | Pressure Sensor |
| FFMP189 | Pressure Sensor |
| FFMP190 | Pressure Sensor |
| FFMP191 | Pressure Sensor |
| FFMP192 | Pressure Sensor |
| FFMP193 | Pressure Sensor |
| FFMP194 | Pressure Sensor |
| FFMP195 | Pressure Sensor |
| FFMP196 | Pressure Sensor |
| FFMP197 | Pressure Sensor |
| FFMP198 | Pressure Sensor |
| FFMP199 | Pressure Sensor |
| FFMP200 | Pressure Sensor |
| FFMP201 | Pressure Sensor |
| FFMP202 | Pressure Sensor |
| FFMP203 | Pressure Sensor |
| FFMP204 | Pressure Sensor |
| FFMP205 | Pressure Sensor |
| FFMP206 | Pressure Sensor |
| FFMP207 | Pressure Sensor |
| FFMP208 | Pressure Sensor |
| FFMP209 | Pressure Sensor |
| FFMP210 | Pressure Sensor |
| FFMP211 | Pressure Sensor |
| FFMP212 | Pressure Sensor |
| FFMP213 | Pressure Sensor |
| FFMP214 | Pressure Sensor |
| FFMP215 | Pressure Sensor |
| FFMP216 | Pressure Sensor |
| FFMP217 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFMP218 | Pressure Sensor |
| FFMP219 | Pressure Sensor |
| FFMP220 | Pressure Sensor |
| FFMP221 | Pressure Sensor |
| FFMP222 | Pressure Sensor |
| FFMP223 | Pressure Sensor |
| FFMP224 | Pressure Sensor |
| FFMP225 | Pressure Sensor |
| FFMP226 | Pressure Sensor |
| FFMP227 | Pressure Sensor |
| FFXF002 | Flow Sensor |
| FFXF003 | Flow Sensor |
| FFXF004 | Flow Sensor |
| FFXF005 | Flow Sensor |
| FFXF006 | Flow Sensor |
| FFXF007 | Flow Sensor |
| FFXF008 | Flow Sensor |
| FFXF009 | Flow Sensor |
| FFXF010 | Flow Sensor |
| FFXF011 | Flow Sensor |
| FFXF012 | Flow Sensor |
| FFXF013 | Flow Sensor |
| FFXF014 | Flow Sensor |
| FFXF015 | Flow Sensor |
| FFXF016 | Flow Sensor |
| FFXF017 | Flow Sensor |
| FFXF018 | Flow Sensor |
| FFXF019 | Flow Sensor |
| FFXF020 | Flow Sensor |
| FFXF021 | Flow Sensor |
| FFXF022 | Flow Sensor |
| FFXF023 | Flow Sensor |
| FFXF024 | Flow Sensor |
| FFXF025 | Flow Sensor |
| FFXF026 | Flow Sensor |
| FFXF027 | Flow Sensor |
| FFXF028 | Flow Sensor |
| FFXF029 | Flow Sensor |
| FFXF030 | Flow Sensor |
| FFXF031 | Flow Sensor |
| FFXF032 | Flow Sensor |
| FFXP002 | Pressure Sensor |
| FFXP003 | Pressure Sensor |

| Product | Description |
|-------------------------|--------------------|
| FFXP004 | Pressure Sensor |
| FFXP005 | Pressure Sensor |
| FFXP006 | Pressure Sensor |
| FFXP007 | Pressure Sensor |
| FFXP008 | Pressure Sensor |
| FFXP009 | Pressure Sensor |
| FFXP010 | Pressure Sensor |
| FFXP011 | Pressure Sensor |
| FFXP012 | Pressure Sensor |
| FFXP025 | Pressure Sensor |
| FFXP026 | Pressure Sensor |
| FFXP027 | Pressure Sensor |
| FFXP028 | Pressure Sensor |
| FFXP029 | Pressure Sensor |
| FFXP030 | Pressure Sensor |
| FFXP031 | Pressure Sensor |
| FFXP032 | Pressure Sensor |
| FFXP033 | Pressure Sensor |
| FFXP034 | Pressure Sensor |