



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онџл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Xec

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### roBRAND'So APOUD

SCTduts	AiptCnesNT
<a href="#">I12A-</a>	SA6V0N(X 0V(4E3 5)
<a href="#">I10(5</a>	OlugRin filter P P85) 7dH
<a href="#">I10(C</a>	0( C Oilter
<a href="#">I10(-</a>	filter
<a href="#">I192C</a>	2heck 9alve
<a href="#">I193(-TGG</a>	Oressure8vacuum limiting valve 5)
<a href="#">4.S.Ø4RA3F 1G 2.0.LL M 1G M P1</a>	
<a href="#">-2( DGC S- SN38 -DGCS-1GUGGYF</a>	3egenerative Ølower
<a href="#">-2( DGCRS- SN3 8-DGCS-UA2x51G</a>	3egenerative Ølower
<a href="#">-2( DGCRS- SN3 8 -DGCS-UA2x11G</a>	3egenerative Ølower
<a href="#">-3IGSXGGUGGCG</a>	-ide 2hannel Ølower
<a href="#">-3IGSXGGUGGI1</a>	-ide 2hannel Ølower
<a href="#">-3IGSXGGUGGIC</a>	-ide 2hannel Ølower
<a href="#">-DGCS-1GUGPGI</a>	Ølowers
<a href="#">-DG54XUAXØ21G</a>	3egenerative Ølower
<a href="#">-DGC4X1GUGGP1</a>	3egenerative Ølower
<a href="#">-DPGS-UAØ-YGG7DPG S- SN3H</a>	3egenerative Ølower
<a href="#">-DG-SXGGUGGI-</a>	Xouble stage blower motor
<a href="#">-DGCS-UA2x51G</a>	Ølower Sotor
<a href="#">5G1PUGGYF</a>	Sotor
<a href="#">-DG1S-1GUGG-P</a>	-VXE 2BA66E( Ø(NWE3
<a href="#">-DG5S-UA2M91G</a>	DG5S-P.1BO PP18IFG8CGI3 D( (1G
<a href="#">-3FGSXGGUGGI-</a>	Ølower
<a href="#">-3FGSXGGUGGIL</a>	Ølower
<a href="#">DGYS- 1.1kW</a>	3egenerative Ølower
<a href="#">-DG5S-1GUGPIG</a>	ErsatKger+t Ku DG5S- G,Y1kW -86@ EIPLP1
<a href="#">-DG5S-1GUGPIP</a>	Ølower
<a href="#">PG5GDG1GGYGG</a>	-ound Vnsul.Oanel
<a href="#">PG51DG1GPPGP</a>	
<a href="#">-DGCS-1GUGPGP</a>	3egenerative Ølower
<a href="#">C1GFGCIGCGGG</a>	Øearing8W+IKlager
<a href="#">-DPP4XGGUGGIL</a>	3egenerative Ølower
<a href="#">-DGL3SXGGUGG1L</a>	3egenerative Ølower
<a href="#">DGLS- Y.1BO T3PPI</a>	3egenerative Ølower
<a href="#">-DGL4XGGUGGIL</a>	-VXE 2BA66E( Ø(NWE3











































<b>Product</b>	<b>Description</b>
<a href="#">IHP12-S1.5NO56-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO56-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO57-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO57-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO69-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO69-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO78-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO78-A2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO78-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO78-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO93-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO93-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO94-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5NO94-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC138-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC138-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC43-A2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC43-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC47-A2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC47-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC56-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC56-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC57-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC57-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC69-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC69-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC78-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC78-A2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC78-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC78-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC93-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC93-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC94-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PC94-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO138-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO138-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO43-A2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO43-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO47-A2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO47-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO56-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO56-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO57-A12</a>	Inductive Sensor - High-Pressure M12

Product	Description
<a href="#">IHP12-S1.5PO57-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO69-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO69-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO78-A12</a>	Inductive Sensor
<a href="#">IHP12-S1.5PO78-A2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO78-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO78-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO93-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO93-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO94-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S1.5PO94-N12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S2PO56-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP12-S2PO78-A12</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHP14-S3PO56S-N2P</a>	Inductive Sensor - High-Pressure M12
<a href="#">IHT12-N4ANC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4ANC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4ANC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4ANC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4ANO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4ANO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4ANO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4ANO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4APO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BNC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BNC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BNC50-N2S</a>	Inductive Sensor
<a href="#">IHT12-N4BNC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BNO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BNO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BNO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BNO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BPC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BPC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BPC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BPC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BPO50-A2S</a>	Inductive Sensor M12 - High Temperature

<b>Product</b>	<b>Description</b>
<a href="#">IHT12-N4BPO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BPO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N4BPO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8ANO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8APO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BNO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-N8BPO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2ANO50-N2T</a>	Inductive Sensor M12 - High Temperature



<b>Product</b>	<b>Description</b>
<a href="#">IHT12-S2APC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2APC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2APC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2APC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2APO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2APO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2APO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2APO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNC50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNC50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNO50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNO50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNO50-N2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BNO50-N2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BPC50-A2S</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BPC50-A2T</a>	Inductive Sensor M12 - High Temperature
<a href="#">IHT12-S2BPC50-N2S</a>	Inductive Sensor M12 - High Temperature